




AMG3604N-DR Instruction Manual

Single Channel Receive Unit with Bi-directional Data Channel for a Dual Redundant fibre ring - includes AMG NMS Network Management Interface

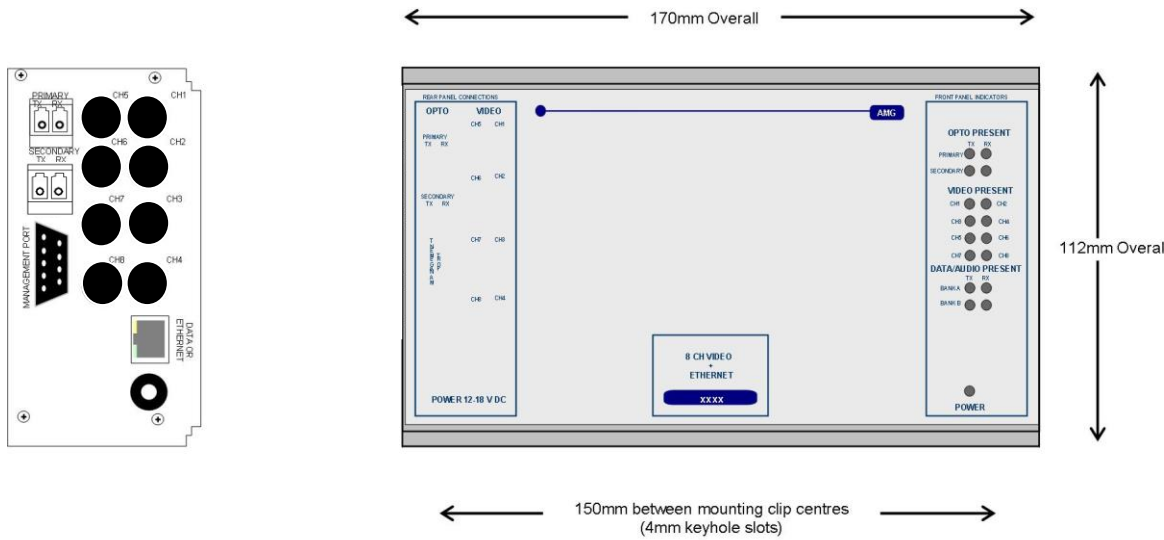

The **AMG3604N-DR** is a standalone single channel receive unit designed to transmit and receive one bi-directional data channel to multiple **AMG3603-DR** units via a low speed data interface on a multimode optical fibre ring with Dual Redundant operation.

The **AMG3604N-DR** is designed to be powered using an **AMG2003** standalone power supply.

The **AMG3604N-DR** is designed to operate with an **AMG3603-DR** or rackmount equivalent **AMG3603R-DR** data receive unit.

Contents


| | |
|-----------------------------------------------|-----------|
| Introduction | 3 |
| Unit Functional Schematic..... | 3 |
| Dual Redundant Operation..... | 3 |
| Connections | 5 |
| Power Connection | 5 |
| Data and Audio Channel Connections | 5 |
| Data and Audio Channel Configuration | 6 |
| Data and Audio Channel Configuration..... | 6 |
| Data Interface Connections Channel A..... | 6 |
| Data Channel A Configuration..... | 6 |
| Front Panel Indicators | 7 |
| Power LED..... | 7 |
| Fibre Optic LED's | 7 |
| Network Management | 8 |
| NMS Operation..... | 8 |
| SNMP | 8 |
| Network Alarm Port | 8 |
| The Management Interface | 8 |
| Alarm Output and Reset Operation | 10 |
| Physical Information | 11 |
| Dimensions | 11 |
| Mounting Details..... | 11 |
| Removal / replacement from / to the Case..... | 11 |
| Safety | 11 |
| Maintenance and Repair | 11 |

Introduction

Unit Functional Schematic

The **AMG3604N-DR** transmits and receives the optical signals from both a primary and secondary optical channel.

These optical channels are transmitted on two optical fibre in opposite directions, operating at 1310nm.

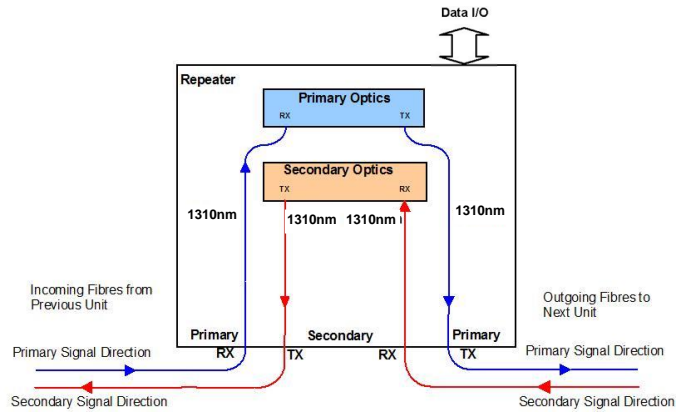

The **AMG3604N-DR** receives and drops off data signals transmitted from **AMG3603-DR** insert units. It then inserts data signals onto the outgoing optical signal to **AMG3603-DR** insert units.

As each unit regenerates the optical signal, the optical dynamic range between each optically connected node is 17dB.


Dual Redundant Operation

In normal operation where optical connection to both the previous unit and subsequent insert units is OK, data signals are transmitted on the primary output and data is received from the primary input. The secondary optical input is independent and is regenerated on the secondary output.


If the primary input signal is not present, a unit will shut down the secondary output to inform the previous unit that the signal route is not OK. The previous unit will then send out the data signals on its secondary output in the opposite direction. This signal will be repeated around the ring to get back to this unit on the secondary route. As the primary input is not present on this unit, the data signal will now be taken from the secondary optical input thus maintaining integrity of the data transmission.

If the secondary input signal is not present, an insert unit will assume that the route to the next unit is not OK and send out the data signal on the secondary optical output. This data will be transmitted to the next unit around the ring in the opposite direction on the secondary route.


The **AMG3604N-DR** or rackmount **AMG3604RN-DR** is designed to be connected in a ring or point to point system.

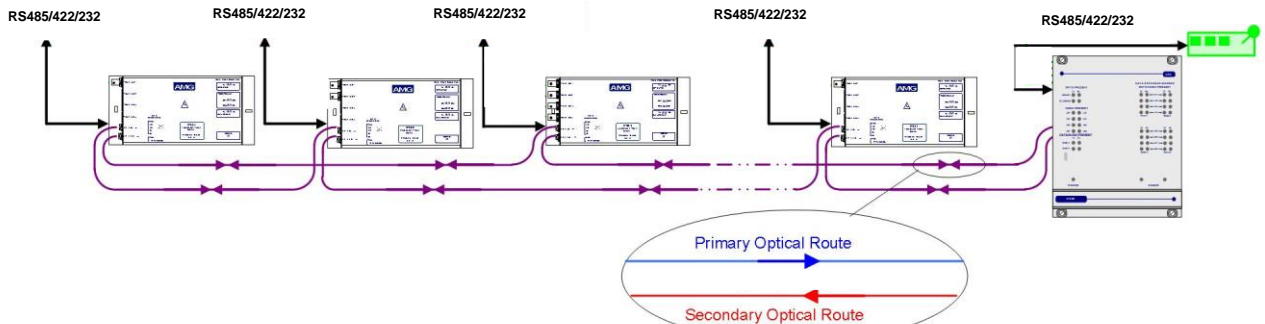

If a fibre link is broken, operation of the ring continues by making use of the secondary optical fibre route as below:

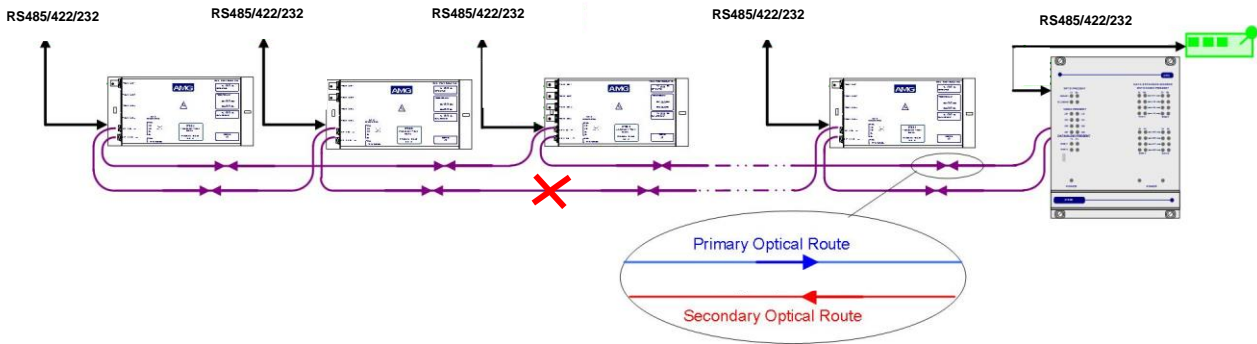

If multiple breaks occur, operation is maintained with all the units still physically connected to the receiver.

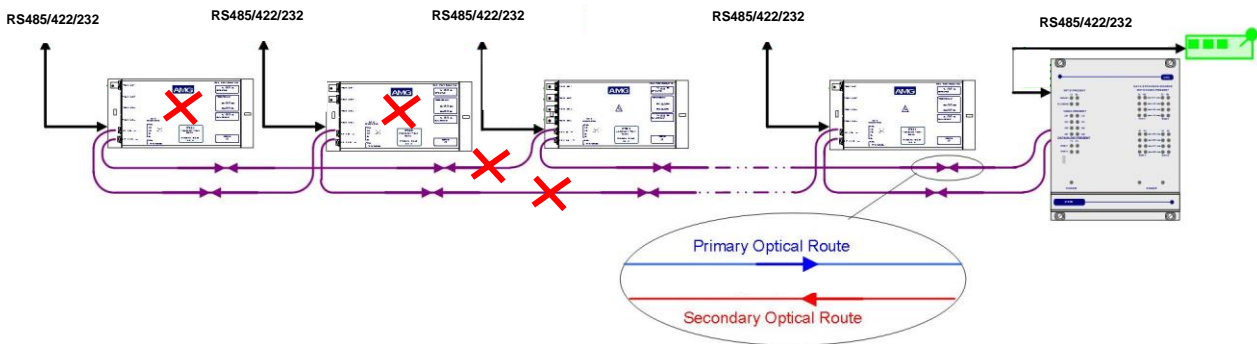

Connections

Optical Connections

PRIMARY OPTO OUT

Connector LC/PC
Primary Optical Launch Power..... -5dBm
Wavelength..... 1310nm
Secondary Optical Sensitivity..... -22dBm
Wavelength..... 1310nm

PRIMARY OPTO IN

Connector LC/PC
Primary Optical Sensitivity..... -22dBm
Wavelength..... 1310nm
Secondary Optical Launch Power -5dBm
Wavelength..... 1310nm

Optical Fibre Multimode 50/125 or 62.5/125**

**Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 1.25Gbits/s. The maximum bandwidth specification at this data rate for Multimode fibre is 500m, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 500m, to have the optical fibre tested.

Power Connection

Connector Type 2.1mm screw lock long power jack – centre positive
Connector Partno. Switchcraft S761K, AMG G16125-00
Supply Voltage 13.5 to 18.0 Volts DC.
Maximum Power 10 Watts

Data and Audio Channel Connections

DATA CHANNEL A

Data Channel A 1 channel
Data Connector RJ45

Channel A Interface On Board Data Interface – RS232, RS422 or RS485. Selected by slide switch above RJ45 connector.

RS485 – switch position - high (closest to BNC connections)
RS422 – switch position – middle
RS232 – switch position – low (furthest from BNC connections)

DATA CHANNEL B

Data Channel B Not Present

Data and Audio Channel Configuration

Data and Audio Channel Configuration

The **AMG3604N-DR** and rackmount equivalent **AMG3604RN-DR** sends and receives data to/from Channel A. Channel B is not available. Channel A is a single data interface selectable by the user with the slide switch on the rear panel.

Data Interface Connections Channel A

| RJ45 Pin No. | Channel A | | | Cat 5/6 Cable Colour Code T568B |
|--------------|---------------------|--------------------|--------------------|---------------------------------|
| | RS485 [switch high] | RS422 [switch mid] | RS232 [switch low] | |
| 1 | | IN + (A) | GND | White/orange |
| 2 | | IN - (B) | IN | Orange |
| 3 | | | | White/green |
| 4 | | | | Blue |
| 5 | | | | White/blue |
| 6 | | | | Green |
| 7 | IN/OUT + (A) | OUT + (A) | N/A | White/brown |
| 8 | IN/OUT - (B) | OUT - (B) | OUT | Brown |

Note: (A) or (B) in brackets in above table refers to RS485 / RS422 data specification, not Channel A, Channel B.

Data Channel A Configuration

Channel A is always present and allows for a RS232, RS422 (full duplex, four wire) or RS485 (half duplex, two wire) interface depending on the position of the switch located above the RJ45 connector. The switch signifies the presence of the X16004 Low Speed Data/Audio Interface Board. If there are LED's present on the RJ45 connector then an X16003 Ethernet Interface Board is fitted.

The data input for both the RS485 and the RS422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic zero respectively. It is important therefore to terminate the RS485 bus or the RS422 input bus using 120Ω if a pre-bias is present on the RS485 or RS422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS485 bus. This pre-bias is applied by pulling one arm of the RS485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5kΩ. If the third party bias resistors are less the 750Ω the bus can be double or triple terminated as required to ensure that a tri-state level is detected.

Note: The Data Channel A is shipped from the factory set up for RS485 operation unless otherwise requested.

Front Panel Indicators

Power LED

| | | | |
|-------------|-------|---|--------------------------|
| Power | Green | - | unit powered |
| | Off | - | no power applied to unit |

Fibre Optic LED's

| | | | |
|------------------------------|-------|---|-----------------------------------------|
| Primary Opto Sync TX..... | Green | - | optical channel transmitting |
| | Off | - | optical channel not transmitting |
| Primary Opto Sync RX | Green | - | optical channel receiving |
| | Org | - | optical channel receiving but not sync. |
| | Off | - | optical channel not receiving |
| Secondary Opto Sync TX..... | Green | - | optical channel transmitting |
| | Off | - | optical channel not transmitting |
| Secondary Opto Sync RX | Green | - | optical channel receiving |
| | Org | - | optical channel receiving but not sync. |
| | Off | - | optical channel not receiving |

Low Speed Data LEDs

Channel A

| | | | |
|--------------------------------------|-------|---|--------------------------------------------|
| Data Present TX (RS485 or RS422) ... | Green | - | logic zero (+V, -V) present on IN+, IN- |
| | Red | - | logic one (-V,+V) present on IN+, IN- |
| | Off | - | tri-state off or no connection on IN+, IN- |
| Data Present TX (RS232) | Green | - | logic zero (+V) present on input IN+ |
| | Red | - | logic transitions present on input IN+ |
| | Off | - | logic one (-V) present on input IN+ |

This represents the data signals being transmitted on the optical fibre

| | | | |
|-------------------------------------|-------|---|----------------------------------------------|
| Data Present RX (RS485 or RS422)... | Green | - | logic zero (+V,-V) present on OUT+, OUT- |
| | Red | - | logic one (-V,+V) present on OUT+, OUT- |
| | Off | - | tri-state off or no connection on OUT+, OUT- |
| Data Present RX (RS232) | Green | - | logic zero (+V) present on OUT+ |
| | Red | - | logic transitions present on OUT+ |
| | Off | - | logic one (-V) present on OUT+ |

This represents the data signals being received on the optical fibre

Network Management

Network Management of the system is provided by the AMG Management Interface which allows Management using the AMG SNMP enabled Management software.

NMS Operation

Requires Network Management "N" option in each Rx (Receive) or Tx (Transmit) unit.
Recommended for Dual Redundant Options to give knowledge of failure
Rx collects information regarding all attached Tx units

Interface

- 9 Way D-type management port on each Rx or Tx
- RS-232 or RS-485 on Management Port
- Multiple Rx/Tx units use RS-485 and effectively parallel all the RS-485 ports together
- Connect to PC RS-232 Port via RS-485/RS-232 convertor

Proprietary GUI

- Loss of unit
- Loss of Optical Input
- Loss of Video Input

SNMP

SMNP Compatibility: SMNP Version 1
AMG3700 Device do NOT act as SNMP Agents

PC running AMG NMS software is the only 'true' SNMP Agent

- Provides Proxy access to all AMG devices
- SNMP Community String used to differentiate between AMG devices

Network Alarm Port

Alarm Output: Normally Closed

Opens when loss of :

- Video at any insert node
- Primary optical input at any node
- Secondary optical input at any node
- Any node through a power down
- Power at the receiver

Closed by: Reset

The Management Interface

The Management Interface is fitted to AMG receivers / transmitters and is signified by a 'N' in the part number

Each management interface, thus each receiver or transmitter, has an ID number with is identified below the management port. This ID number is used by the AMG Network Management System (NMS) to identify the unit.

The physical interface is a 9 way female D-type connector. It supports either RS-232 or RS-485.

Management Port Pin-out:

| Pin Number | RS-232 Connection | RS-485 Connection |
|------------|----------------------------------------------|--------------------|
| 1 | - | Data B (+) |
| 2 | RD (data out of port) | Data A (-) |
| 3 | TD (data into port) | - |
| 4 | Connect to DTR held -ve or shorted to ground | - |
| 5 | SG (signal ground) | SG (signal Ground) |
| 6 | Alarm Output | Alarm Output |
| 7 | Alarm Output | Alarm Output |
| 8 | Alarm reset (Gnd) | Alarm reset (Gnd) |
| 9 | Alarm reset | Alarm reset |

For multiple Management Ports it is recommended that the RS-485 interface is used with each RS-485 pair connected in parallel. In this case an RS-485 to RS-232 / USB converter is required in order to connect to a standard PC Comms. Port.

The time delay between receiving a data request and sending out a response from the port is 625µs. Therefore any RS-485 converter should have a 'turn around' time or 'transmit dwell' time equal to or less than 625µs.

Recommended RS-485 Converter's are:

RS-485 to RS-232

Dataforth DCP485-S: Available in the UK from <http://uk.farnell.com/> Order No. 300-9348

Settings on the DCP485-S:

- RS-485 Switch Settings: 1-UP, 2-DOWN, 3-DOWN, 4-UP, 5-DOWN, 6-DOWN, 7-DOWN, 8-UP
- RS-232 Switch Settings: 1-DOWN, 2-UP, 3-DOWN, 4-UP
- DCE/DTE set to DCE.

RS-485 to USB

B&B 485USBTB-2W: Available in Europe from <http://www.bb-europe.com/> Order No. 485USBTB-2W

Connections to management port:

| Management Port | DCP485-S | 485USBTB-2W |
|-----------------|----------|-------------|
| 1 | 2 or 4 | B+ |
| 2 | 3 or 5 | A- |
| 5 | GND | GND |

NOTES:

On the DCP485-S, pins 3 and 5 are connected together and pins 2 and 4 are connected together. On the 485USBTB-2W, there are 2 pairs of terminals both labeled A-, B+, either pair may be used.

Alarm Output and Reset Operation

The alarm output and reset is designed to indicate a change of state of the fibre loop or spur attached to the receiver. The Alarm output is a volts free contact relay output (rating: 0.5A at 125VAC or 1A at 24VDC). It normally open, which means that when not powered the contacts will be open circuit.

On power up the contacts will close and will remain closed for up to 5 seconds. During this time the receiver will monitor and record the state of the AMG transmit units connected to the receiver.

The contacts will then remain closed until there is a change from this recorded state. A change of state would be:

- Addition or loss of video at any insert node
- Addition or loss of primary optical input at any node
- Addition or loss of secondary optical input at any node
- Power up or down of any node
- Loss of power at the receiver

Following a change of state the contacts will remain open, regardless of whether the alarm condition reverts back to its previous state, until the a reset signal is presented to the alarm input connections. The alarm reset input is biased at 5V via a 1k Ω resistor. To reset the alarm, the alarm reset is required to be pulled to ground, either by a volt-free contact or an open collector output. The alarm output will be held in a closed state whilst the alarm reset is connected to ground.

On release of the alarm reset, the alarm output will remain in a closed state until the next change of state to the AMG transmit unit connected to the receiver. The alarm output may not register a change of state which happens within 5 seconds of release of the alarm reset.

Physical Information

Dimensions

Height 112mm
Width 170mm (excluding connectors)
Depth 70mm
Weight 1000grams

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Removal / replacement from / to the Case

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case. Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

| | |
|-------------------|----------------------------|
| Phone | +44 (0) 1767 600 777 |
| Technical Support | +44 (0) 1767 604 491 |
| Email | techsupport@amgsystems.com |