




AMG5623R Instruction Manual

Dual System with 2x Independent Channels each of :

[Single Transmit Unit with one Bi-directional Data Channel plus one Bi-directional Alarm for a Multimode Fibre Link]

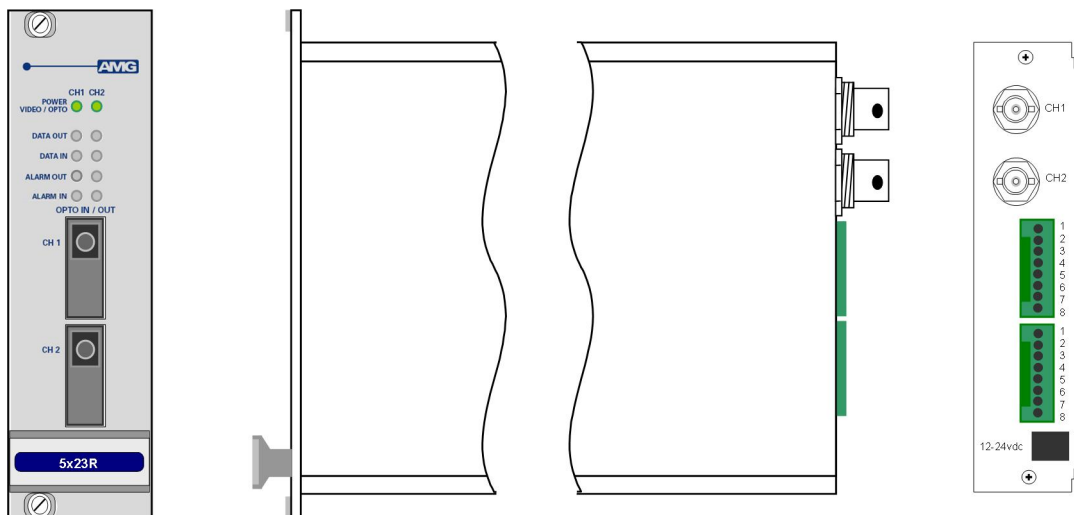

The **AMG5623R** is a **DUAL** rackmount system which provides two independent channels, each designed to transmit one video signal and transmit and receive one bi-directional alarm plus one data signal over one Multimode optical fibre.

The **AMG5623R** is designed to plug into an **AMG2005** or **AMG2009** subrack, which in turn fits into a 19" rack system.

The **AMG5623R** is designed to operate with two **AMG5614 / AMG5614R** single channel or one **AMG5624** or **AMG5624R** dual channel video receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents

| | |
|---|----------|
| Introduction | 3 |
| Unit Functional Schematic..... | 3 |
| Optical Connection | 3 |
| Connections | 4 |
| Video Input Connections | 4 |
| Optical Connections Multimode..... | 4 |
| Power Connection | 4 |
| Data and Alarm Channel Connections | 4 |
| Front Panel Indicators | 5 |
| Power LED..... | 5 |
| Low Speed Data LEDs | 5 |
| Alarm LEDs..... | 5 |
| Data and Alarm Channel Configuration | 6 |
| Data Channel Configuration | 6 |
| Data Interface Connections | 7 |
| Alarm Channel Configuration | 7 |
| Alarm Interface Connections | 7 |
| Physical Information | 8 |
| Dimensions | 8 |
| Mounting Details | 8 |
| Safety | 8 |
| Maintenance and Repair | 8 |

Introduction


Unit Functional Schematic

The **AMG5623R** provides two independent, transmit channels.

Each channel transmits one video signal plus 1 data and 1 bi-directional alarm signal to an **AMG5624** receive unit.


It also receives 1 data and 1 bi-directional alarm signal from the **AMG5624**.

The schematic diagram shows one of the two available channels of the **AMG5623R**

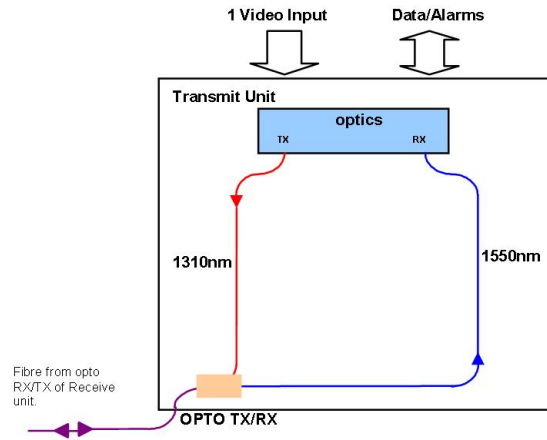

Optical Connection

The **AMG5623R** connections are illustrated in the following example which shows an **AMG5623R** transmit unit together with an **AMG5624R** two channel rackmount receive unit configured as a dual channel point to point system.

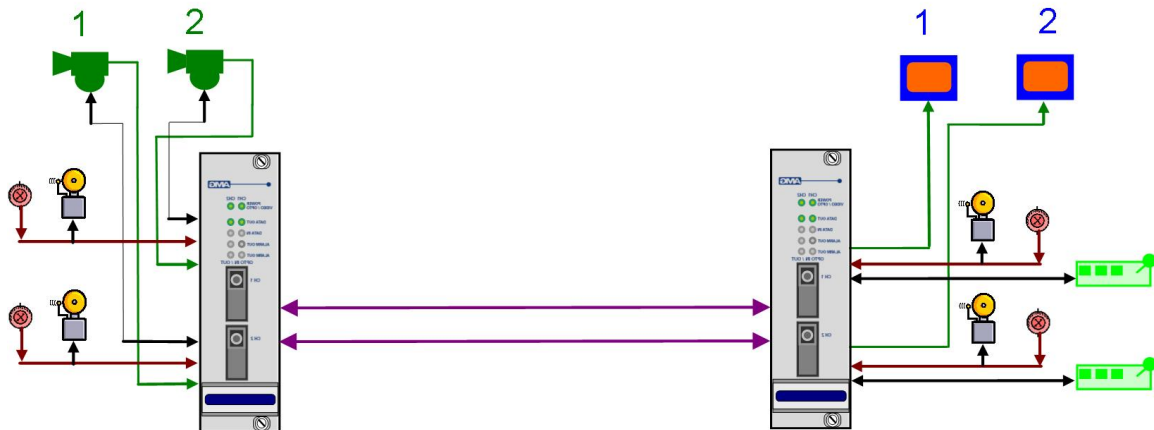

Connections

Video Input Connections

No. of channels2
Connector75 ohm BNC Socket.
Input Impedance75 ohm terminated.
Input Level1 volt p-p nominal
Frequency Response.....10Hz to 7MHz.

Optical Connections Multimode

No. of Optical Connections1 per video channel
Optical FibreMultimode 50/125 or 62.5/125**
ConnectorSC/PC

Minimum Optical Launch Power-10dBm
Transmit Wavelength.....1310nm

Minimum Optical Sensitivity.....-30dBm
Receive Wavelength.....1510nm

Minimum Optical Dynamic Range20dB.

**Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbps/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

Power Connection

Power supplyFrom plug in connection on the AMG2009 or AMG2015 subrack
Power consumption2.5 Watts max.

Data and Alarm Channel Connections

No. of Data Channels1 per video channel.
No. of Alarms1 bi-directional alarm per video channel.

ConnectorsRemovable 8-pin, 2.5mm, Screw Terminal
Connector Partno.....Phoenix 1881383

Data InterfacesRS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches

RS-485 – Switch Position - Top
RS-422 – Switch Position - Middle
RS-232 – Switch Position - Bottom

Alarm InputContact Closure pull-up is 330R to +3V3
Alarm Output.....Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω

Front Panel Indicators

Power LED

| | | | |
|----------------------------|-------|---|----------------------------------|
| Power / Video / Opto | Green | - | Video present & opto sync. |
| | R/G | - | Opto sync. but no video present. |
| | G/R | - | Video present but no opto sync. |
| | Red | - | No opto sync. |
| | Off | - | No power applied to unit |

Low Speed Data LEDs

| | | | |
|---------------------------------------|-------|---|--|
| Data Present IN (RS485 or RS422) | Green | - | logic zero (+V, -V) present on IN+, IN- |
| | Red | - | logic one (-V, V+) present on IN+, IN- |
| | Off | - | tri-state off or no connection on IN+, IN- |

| | | | |
|-------------------------------|-------|---|--|
| Data Present IN (RS232) | Green | - | logic zero (+V) present on input IN+ |
| | Red | - | logic transitions present on input IN+ |
| | Off | - | logic one (-V) present on input IN+ |

IN corresponds to the data signals being transmitted onto the optical fibre.

| | | | |
|-----------------------------------|-------|---|--|
| Data Present OUT (RS485 or RS422) | Green | - | logic zero (+V, -V) present on OUT+, OUT- |
| | Red | - | logic one (-V, +V) present on OUT+, OUT- |
| | Off | - | tri-state off or no connection on OUT+, OUT- |

| | | | |
|--------------------------------|-------|---|-----------------------------------|
| Data Present OUT (RS232) | Green | - | logic zero (+V) present on OUT+ |
| | Red | - | logic transitions present on OUT+ |
| | Off | - | logic one (-V) present on OUT+ |

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

Channel 1

| | | | |
|---------------|-------|---|-----------------------------|
| ALARM IN..... | Green | - | Alarm ON / Contacts closed. |
| | Off | - | Alarm OFF / Contacts open. |

| | | | |
|----------------|-------|---|-----------------------------|
| ALARM OUT..... | Green | - | Alarm ON / Contacts closed. |
| | Off | - | Alarm OFF / Contacts open. |

Channel 2


| | | | |
|---------------|-------|---|-----------------------------|
| ALARM IN..... | Green | - | Alarm ON / Contacts closed. |
| | Off | - | Alarm OFF / Contacts open. |

| | | | |
|----------------|-------|---|-----------------------------|
| ALARM OUT..... | Green | - | Alarm ON / Contacts closed. |
| | Off | - | Alarm OFF / Contacts open. |

Data and Alarm Channel Configuration

The **AMG5623R** sends and receives data to/from up to two **AMG5614** single channel or one **AMG5624** dual channel receive unit or rackmount equivalent. Each physical data interface RS-485, RS-422 or RS-232 is individually selectable by the user with the corresponding slide switch mounted on the main PCB inside the enclosure.

One bi-directional alarm is also provided for each video channel. The alarm input is typically connected to a contact closure switch. The alarm output can receive an on/off signal from an **AMG5624R** and is typically used to convey contact closure status.

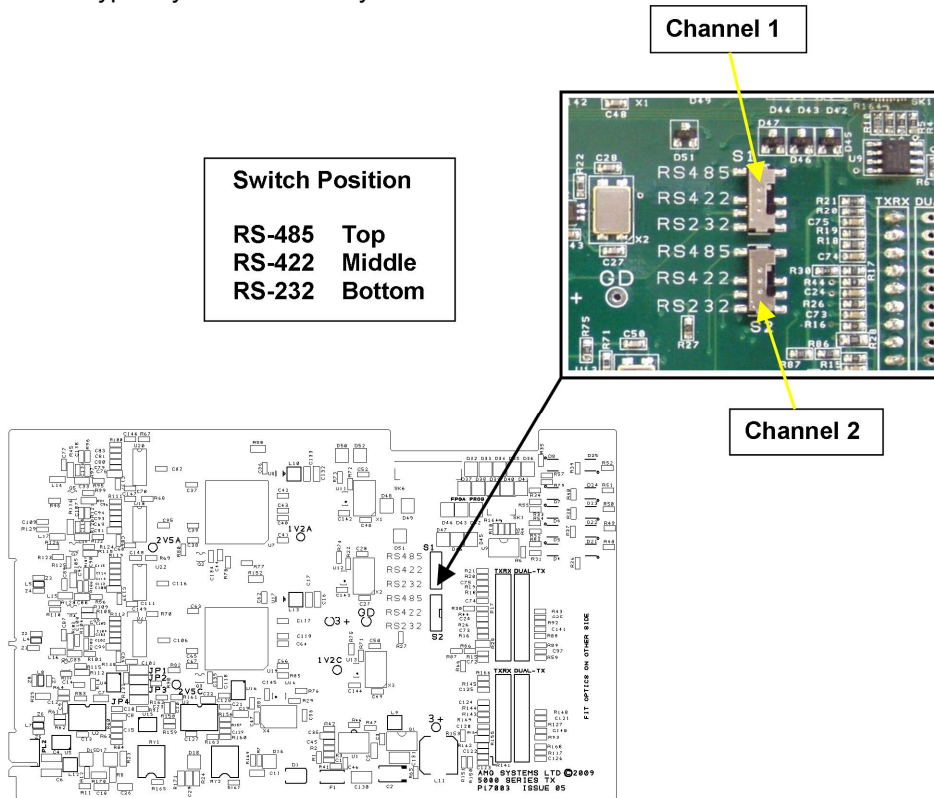

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5kΩ. If the third party bias resistors are less than the 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

Data Channels 1 and 2.

| Connector Pin No. | Data Channel | | |
|-------------------|---------------------|------------------------|------------------------|
| | RS-485 [switch top] | RS-422 [switch middle] | RS-232 [switch bottom] |
| 1 | | IN + (A) | IN |
| 2 | | IN - (B) | |
| 3 | GND | GND | GND |
| 4 | | | |
| 5 | | | |
| 6 | | | |
| 7 | IN/OUT + (A) | OUT + (A) | |
| 8 | IN/OUT - (B) | OUT - (B) | OUT |

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The **AMG5623R** provides 1 bi-directional alarm output / contact closure input per video channel.

The alarm input is typically connected to a contact closure switch. An ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

The alarm output can receive an on/off signal from an **AMG5624** and is typically used to convey contact closure status. An alarm output uses a solid-state relay, with a maximum load current of 150mA at 125Vac/dc and $R_{on} < 6.5\Omega$.

Alarm Interface Connections

Video Channels 1 & 2

| Connector Pin No. | Alarm Interface | |
|-------------------|-----------------|-------------|
| | Alarm IN | Alarm OUT |
| 1 | | |
| 2 | | |
| 3 | GND | |
| 4 | ALARM IN + | |
| 5 | | ALARM OUT - |
| 6 | | ALARM OUT + |
| 7 | | |
| 8 | | |

Physical Information

Dimensions

Height.....3U Plug-in
Width.....7HP
Depth170mm excluding connectors
Weight.....500grams

Mounting Details

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

| | |
|-------------------|----------------------------|
| Phone | +44 (0) 1767 600 777 |
| Technical Support | +44 (0) 1767 604 491 |
| Email | techsupport@amgsystems.com |