


## 8 Channel Video Transmit Unit with up to 8 Bi-directional Data and Audio Channels on One Single Mode Fibre

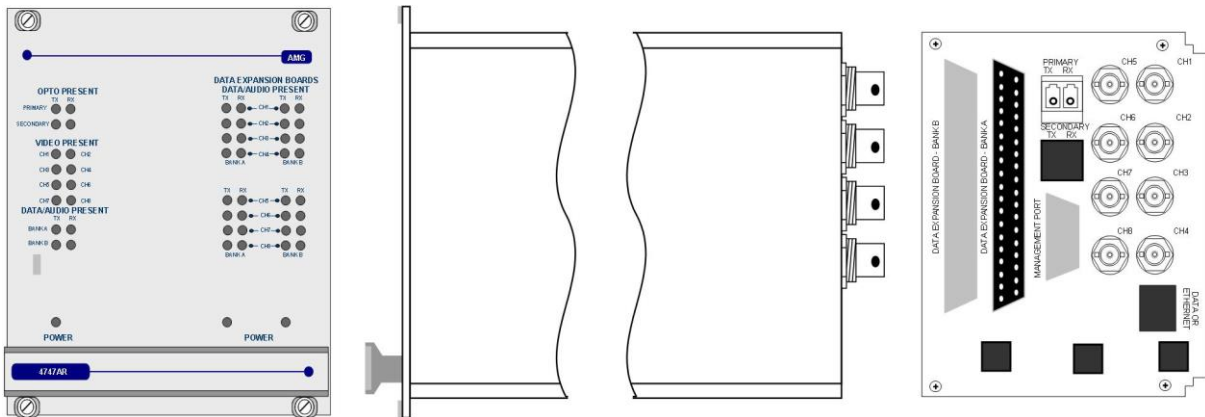

The **AMG4787AR-SF** is a rackmount four channel video transmit unit designed to transmit 8 video signals and transmit and receive up to 8 data or audio signals over one singlemode fibre. The 8 data/audio channel interfaces, whether RS232, RS422, RS485, 20mA, TTL, Contact Closure, Lonworks or Audio, are defined at manufacture by the addition of daughter boards fitted onto the Data Expansion Board A.

The **AMG4787AR-SF** is designed to plug into an AMG2005 subrack, which in turn fits into a 19" rack system.

The **AMG4787AR-SF** is designed to operate with **AMG4788A-SF** or rackmount equivalent **AMG4788AR-SF** eight channel video receive unit in a point to point configuration.

# Contents


|  |          |
|--|----------|
| <b>Introduction</b>                                    | <b>3</b> |
| Unit Functional Schematic.....                         | 3        |
| Optical Connection .....                               | 3        |
| <b>Connections</b>                                     | <b>4</b> |
| Video Input Connections .....                          | 4        |
| Optical Connections .....                              | 4        |
| Power Connection .....                                 | 4        |
| Data Channel Connections.....                          | 4        |
| <b>Data and Audio Channel Configuration</b>            | <b>5</b> |
| Data Interface Daughter Board Options .....            | 5        |
| Data and Audio Channel Configuration.....              | 5        |
| Daughter Board Layout .....                            | 5        |
| Data and Audio Daughter Board Fitting Instruction..... | 5        |
| Data and Audio Connections.....                        | 6        |
| <b>Front Panel Indicators</b>                          | <b>7</b> |
| Power LED.....   | 7        |
| Video Input LED's.....                                 | 7        |
| Fibre Optic LED's .....                                | 7        |
| Low Speed Data LEDs .....                              | 7        |
| <b>Physical Information</b>                            | <b>9</b> |
| Dimensions .....                                       | 9        |
| Mounting Details.....                                  | 9        |
| Removal / replacement from / to the Case.....          | 9        |
| <b>Safety</b>  | <b>9</b> |
| <b>Maintenance and Repair</b>                          | <b>9</b> |

## Introduction

### Unit Functional Schematic


The **AMG4787AR-SF** transmits up to 8 video and 8 data and audio signals to the **AMG4788AR-SF**.

It also receives up to 8 data and audio channels transmitted from the **AMG4788AR-SF**.

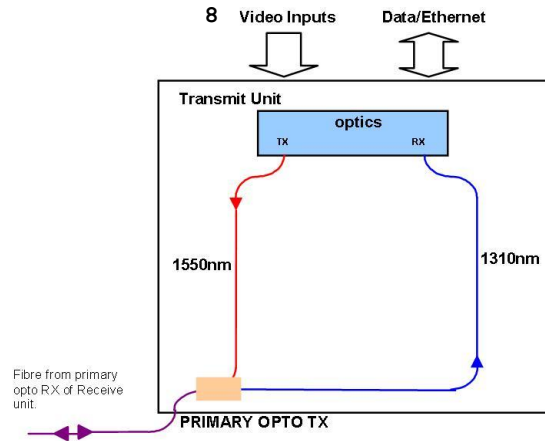

### Optical Connection

The **AMG4787AR-SF** is connected as illustrated below when used with an **AMG4788AR-SF** 8-channel receive unit acting as a point to point system.

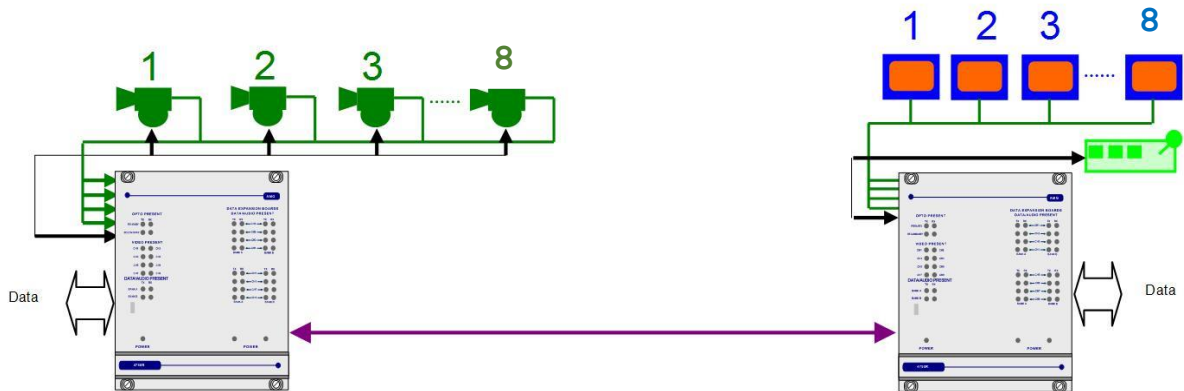

## **Connections**

---

### **Video Input Connections**

No. of channels .....8  
Connector .....75 ohm BNC Socket.  
Input Impedance .....75 ohm terminated.  
Input Level .....1 volt p-p nominal  
Frequency Response.....10Hz to 7MHz.

### **Optical Connections**

#### **PRIMARY OPTO IN**

Connector .....LC/PC  
Optical Fibre .....One fibre - Singlemode

Primary Optical Launch Power .....-5dBm  
Wavelength .....1550nm

Primary Optical Sensitivity .....-22dBm  
Wavelength .....1310nm

### **Power Connection**

Power supply .....from plug in connection on the AMG2009 / AMG2015 subrack  
Power consumption .....10 Watts max.

### **Data Channel Connections**

Total No. of Data Channels .....8 channels

Data/Audio Channels – BANK A .....8 channels

Data/Audio Channels – BANK B .....Not Used

Connector .....37-way D-Type female connector - shielded.

Connections .....See below for connection and configuration

For the data or audio channels to be present, the appropriate data daughter boards have to be fitted into the data expansion board slots.

## Data and Audio Channel Configuration

The **AMG4787A-SF** and rackmount equivalent **AMG4787AR-SF** sends and receives data in one bank - Bank A. Bank B is not used. The physical interface is determined by the fitting of AMG data or audio daughter boards onto the appropriate data expansion board slots.

### Data Interface Daughter Board Options

The data interface daughter board options are as follows:


| Option Code 'x' | Part No. | Description   |
|-----------------|----------|---|
| 0               | X12542   | 4 Wire Audio Interface Daughter Board                 |
| 1               | X04057   | RS422/485 Data Interface Daughter Board               |
| 2               | X04049   | RS232 Data Interface Daughter Board                   |
| 3               | X04058   | 20mA Current Loop Data Interface Daughter Board       |
| 4               | X12579   | TTL Data Interface Daughter Board                     |
| 5               | X12578   | Contact Closure Data Interface Daughter Board         |
| 6               | X13038   | FTT10A Echelon Lonworks Data Interface Daughter Board |

## Data and Audio Channel Configuration

The data expansion board slots are accessed by removing the AMG unit from its case. A data channel is active when a daughter board is installed in the required data channel slot. Each data interface board enables one bi-directional channel.

### Daughter Board Layout

The channel slots are as follows:

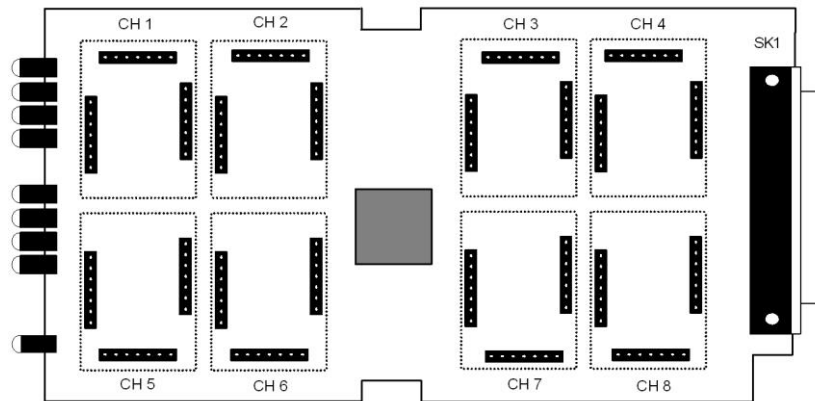


### Data and Audio Daughter Board Fitting Instruction

The data and audio daughter boards pushed on to the pin headers mounted on the data expansion boards. Ensure that the connectors are lined up correctly and not offset before pushing firmly in place. Note that the data and audio channel numbers are associated with each slot. This allocates the pin numbers on the rear panel connector together with the front panel LED indicators.

## Data and Audio Connections

The BANK A data/audio channels pin connections on the rear panel connectors are as follows:

| Pin No. | Description             | Bank |
|---------|-------------------------|------|
| 1       | Audio/Data CH1 IN + (A) | A    |
| 2       | Audio/Data CH1 IN - (B) | A    |
| 3       | Audio/Data CH2 IN + (A) | A    |
| 4       | Audio/Data CH2 IN - (B) | A    |
| 5       | Audio/Data CH3 IN + (A) | A    |
| 6       | Audio/Data CH3 IN - (B) | A    |
| 7       | Audio/Data CH4 IN + (A) | A    |
| 8       | Audio/Data CH4 IN - (B) | A    |
| 9       | GND                     | A    |
| 10      | GND                     | A    |
| 11      | GND                     | A    |
| 12      | Audio/Data CH5 IN + (A) | A    |
| 13      | Audio/Data CH5 IN - (B) | A    |
| 14      | Audio/Data CH6 IN + (A) | A    |
| 15      | Audio/Data CH6 IN - (B) | A    |
| 16      | Audio/Data CH7 IN + (A) | A    |
| 17      | Audio/Data CH7 IN - (B) | A    |
| 18      | Audio/Data CH8 IN + (A) | A    |
| 19      | Audio/Data CH8 IN - (B) | A    |

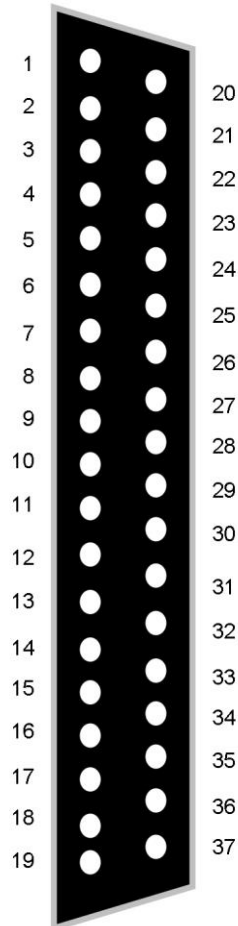

| Pin No. | Description              | Bank |
|---------|--------------------------|------|
| 20      | Audio/Data CH1 OUT + (A) | A    |
| 21      | Audio/Data CH1 OUT - (B) | A    |
| 22      | Audio/Data CH2 OUT + (A) | A    |
| 23      | Audio/Data CH2 OUT - (B) | A    |
| 24      | Audio/Data CH3 OUT + (A) | A    |
| 25      | Audio/Data CH3 OUT - (B) | A    |
| 26      | Audio/Data CH4 OUT + (A) | A    |
| 27      | Audio/Data CH4 OUT - (B) | A    |
| 28      | GND                      | A    |
| 29      | GND                      | A    |
| 30      | Audio/Data CH5 OUT + (A) | A    |
| 31      | Audio/Data CH5 OUT - (B) | A    |
| 32      | Audio/Data CH6 OUT + (A) | A    |
| 33      | Audio/Data CH6 OUT - (B) | A    |
| 34      | Audio/Data CH7 OUT + (A) | A    |
| 35      | Audio/Data CH7 OUT - (B) | A    |
| 36      | Audio/Data CH8 OUT + (A) | A    |
| 37      | Audio/Data CH8 OUT - (B) | A    |
|         |                          |      |

Note: (A) or (B) in brackets in above table refers to RS485/RS422 data specification not Bank A, B.

See Data or Audio Daughter Board Instruction Sheet for meaning of Audio/Data IN+, Audio/Data IN-, Audio/Data OUT+, and Audio/Data OUT- for each data type.

## Front Panel Indicators

---

### Power LED

|             |       |   |                          |
|-------------|-------|---|--------------------------|
| Power ..... | Green | - | unit powered             |
|             | Off   | - | no power applied to unit |

### Video Input LED's

|                           |       |   |   |
|---------------------------|-------|---|---|
| Video Present CH1-8 ..... | Green | - | video signal present on input BNC       |
|                           | R/G   | - | channel present but no video on I/P BNC |

### Fibre Optic LED's

|                            |       |   |   |
|----------------------------|-------|---|---|
| Primary Opto Sync TX.....  | Green | - | optical channel transmitting            |
|                            | Off   | - | optical channel not transmitting        |
| Primary Opto Sync RX ..... | Green | - | optical channel receiving               |
|                            | Org   | - | optical channel receiving but not sync. |
|                            | Off   | - | optical channel not transmitting        |

### Low Speed Data LEDs

#### BANK A (When RS232 data daughter board fitted)

|                             |       |   |                                  |
|-----------------------------|-------|---|----------------------------------|
| Data Present CH1-8 TX ..... | Green | - | logic zero (+V) present on IN+   |
|                             | Red   | - | logic transitions present on IN+ |
|                             | Off   | - | logic one (-V) present on IN+    |

This represents the data signals being transmitted on the optical fibre

|                             |       |   |                                   |
|-----------------------------|-------|---|-----------------------------------|
| Data Present CH1-8 RX ..... | Green | - | logic zero (+V) present on OUT+   |
|                             | Red   | - | logic transitions present on OUT+ |
|                             | Off   | - | logic one (-V) present on OUT+    |

This represents the data signals being received on the optical fibre

#### BANK A (When RS485 / RS422 data daughter board fitted)

|                             |       |   |   |
|-----------------------------|-------|---|---|
| Data Present CH1-8 TX ..... | Green | - | logic zero (+V, -V) present on IN+, IN- |
|                             | Red   | - | logic transitions present on IN+, IN-   |
|                             | Off   | - | logic one (-V, +V) present on IN+, IN-  |

This represents the data signals being transmitted on the optical fibre

|                             |       |   |   |
|-----------------------------|-------|---|---|
| Data Present CH1-8 RX ..... | Green | - | logic zero (+V, -V) present on OUT+, OUT- |
|                             | Red   | - | logic transitions present on OUT+, OUT-   |
|                             | Off   | - | logic one (-V, +V) present on OUT+, OUT-  |

This represents the data signals being received on the optical fibre

#### BANK A (When audio daughter board fitted)

|                        |       |   |  |
|------------------------|-------|---|--|
| Audio Present TX ..... | Green | - | audio present > -40dBm                   |
|                        | Red   | - | audio present > 0dBm (overload at +6dBm) |
|                        | Off   | - | audio not present or < -40dBm            |

This represents the audio signals being transmitted on the optical fibre

|                        |       |   |  |
|------------------------|-------|---|--|
| Audio Present RX ..... | Green | - | audio present > -40dBm                   |
|                        | Red   | - | audio present > 0dBm (overload at +6dBm) |
|                        | Off   | - | audio not present or < -40dBm            |

This represents the audio signals being received from the optical fibre.



## **Physical Information**

---

### **Dimensions**

Height ..... 3U Plug-in  
Width ..... 21HP  
Depth ..... 170mm excluding connectors  
Weight ..... 1200grams

### **Mounting Details**

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

### **Removal / replacement from / to the Case**

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case. Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

## **Safety**

---

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

## **Maintenance and Repair**

---

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

|                   |                            |
|-------------------|----------------------------|
| Phone             | +44 (0) 1767 600 777       |
| Technical Support | +44 (0) 1767 604 491       |
| Email             | techsupport@amgsystems.com |

This page is intentionally blank.

This page is intentionally blank.

This page is intentionally blank.