




AMG6781 Instruction Manual

8 Channel Video Transmit Unit for a Singlemode Optical Fibre Link

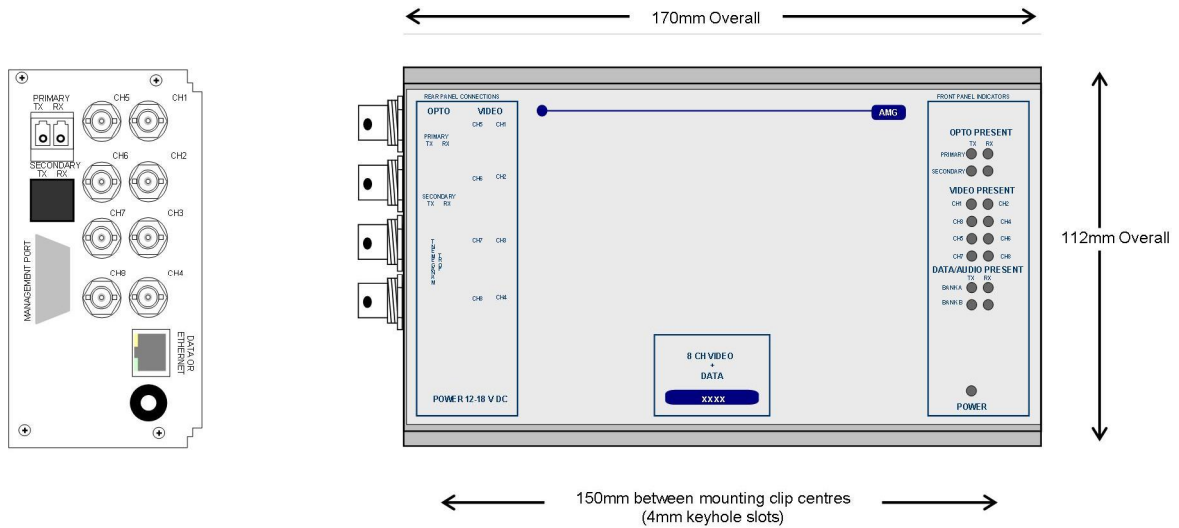

The **AMG6781** is a standalone eight channel video transmit unit designed to transmit 8 video signals over one Singlemode fibre.

The **AMG6781** is designed to be powered using an **AMG2003** standalone power supply.

The **AMG6781** is designed to operate with **AMG6782** or rackmount equivalent **AMG6782R** eight channel video receive unit in a point to point configuration.


Contents

Introduction	3
Unit Functional Schematic.....	3
Optical Connection.....	3
Connections	4
Video Input Connections	4
Optical Connections.....	4
Power Connection.....	4
Front Panel Indicators	5
Power LED	5
Video Input LEDs.....	5
Fibre Optic LEDs.....	5
Physical Information	6
Dimensions.....	6
Mounting Details	6
Removal / replacement from / to the Case.....	6
Safety	6
Maintenance and Repair	6

Introduction

Unit Functional Schematic

The **AMG6781** transmits up to 8 video signals to the **AMG6782**.

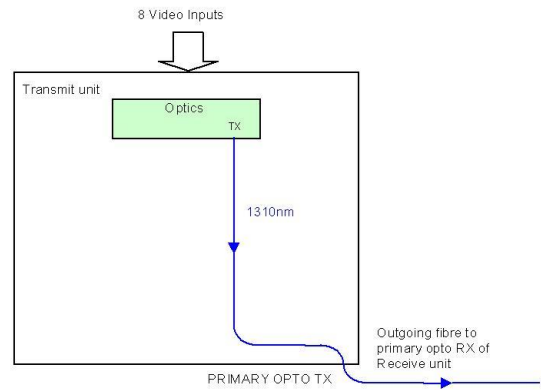

Optical Connection

The **AMG6781** is connected as illustrated below when used with an **AMG6782R** 8-channel receive unit acting as a point to point system.



Connections

Video Input Connections

No. of channels..... 8
Connector..... 75 ohm BNC Socket.
Input Impedance..... 75 ohm terminated.
Input Level..... 1 volt p-p nominal
Frequency Response..... 10Hz to 7MHz.

Optical Connections

PRIMARY OPTO OUT

Connector..... LC/PC
Optical Fibre..... One fibre - Singlemode
Primary Optical Launch Power..... -5dBm
Wavelength..... 1310nm

Power Connection

Connector Type..... 2.1mm screw lock long power jack . centre positive
Connector Partno..... Switchcraft S761K, AMG G16125-00
Supply Voltage..... 13.5 to 18.0 Volts DC.
Maximum Power..... 10 Watts

Front Panel Indicators

Power LED

Power	Green	-	unit powered
	Off	-	no power applied to unit

Video Input LED's

Video Present CH1-8	Green	-	video signal present on input BNC
	R/G	-	channel present but no video on I/P BNC

Fibre Optic LED's

Primary Opto Sync TX	Green	-	optical channel transmitting
	Off	-	optical channel not transmitting

Primary Opto Sync RX..... Not used

Physical Information

Dimensions

Height..... 112mm
Width..... 170mm (excluding connectors)
Depth..... 70mm
Weight..... 1000grams

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Removal / replacement from / to the Case

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case. Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

This page is intentionally blank.

This page is intentionally blank.