


## Single Channel Video Insert Unit with up to 16 Bi-directional Data and Audio Channels plus Ethernet and Dual Redundant Operation on a Single Fibre Ring

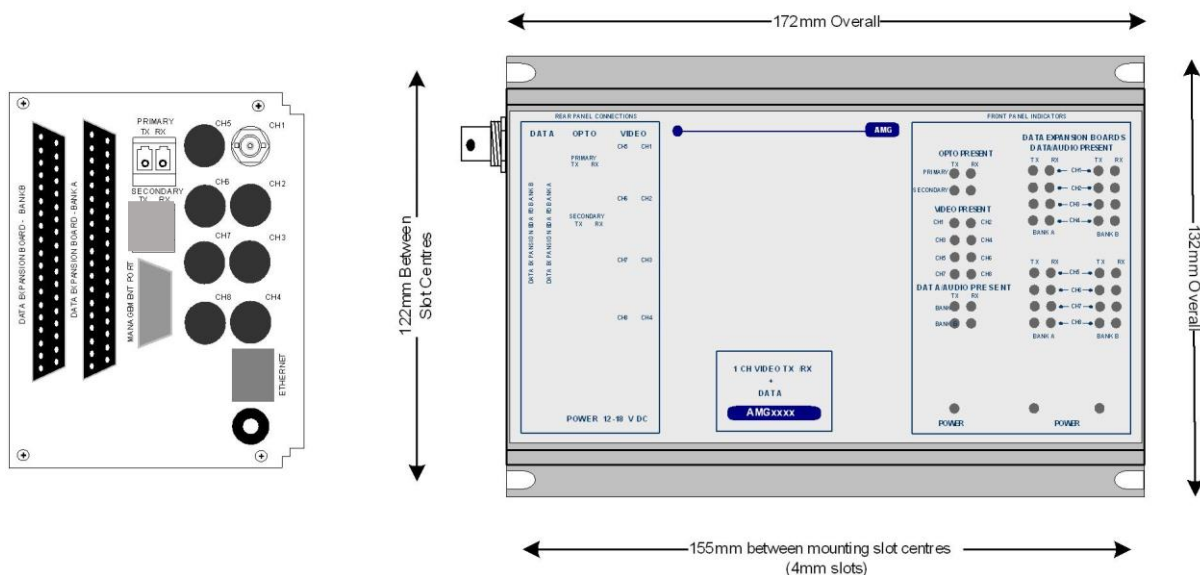

The **AMG3717E-DR-SF** is a standalone single channel video insert unit designed to transmit 1 video signal and transmit and receive up to 16 data or audio signals together with Ethernet over one singlemode fibres with Dual Redundant ring. The 16 data/audio channel interfaces, whether RS-232, RS-422, RS-485, 20mA, TTL, Contact Closure, Lonworks or Audio, are defined at manufacture by the addition of daughter boards fitted onto the Data Expansion Board A & B.

The **AMG3717E-DR-SF** is designed to be powered using an **AMG2003A** standalone power supply.

The **AMG3717E-DR-SF** is designed to operate with **AMG3788EN-DR-SF** or rackmount equivalent **AMG3788ERN-DR-SF** eight channel video and data receive unit. Each receiver will 'drop off' up to eight video channels which are being transmitted around the fibre ring from up to eight single channel insert units.

# Contents

<b>Introduction</b>	<b>3</b>
Unit Functional Schematic.....	3
Video Input Channel Configuration .....	3
Dual Redundant Operation.....	3
Optical Connection .....	4
<b>Connections</b>	<b>5</b>
Video Input Connections .....	5
Optical Connections .....	5
Power Connection .....	5
Ethernet Connection .....	5
Data Channel Connections.....	5
<b>Data and Audio Channel Configuration</b>	<b>6</b>
Data Interface Daughter Board Options .....	6
Data and Audio Channel Configuration.....	6
Daughter Board Layout .....	6
Data and Audio Daughter Board Fitting Instruction.....	6
Data and Audio Connections.....	7
<b>Ethernet Operation</b>	<b>8</b>
<b>Front Panel Indicators</b>	<b>9</b>
Power LED.....	9
Video Input LED's .....	9
Fibre Optic LED's .....	9
Low Speed Data LEDs .....	9
<b>Physical Information</b>	<b>11</b>
Dimensions .....	11
Mounting Details .....	11
Removal / replacement from / to the Case .....	11
<b>Safety</b>	<b>11</b>
<b>Maintenance and Repair</b>	<b>11</b>


## Introduction

### Unit Functional Schematic

The **AMG3717E-DR-SF** transmits and receives optical signals from both a primary and secondary optical channel.

These optical channels are transmitted on the same optical fibre in opposite directions, operating at different wavelengths.

The primary channel operates on 1550nm and the secondary channel on 1310nm.

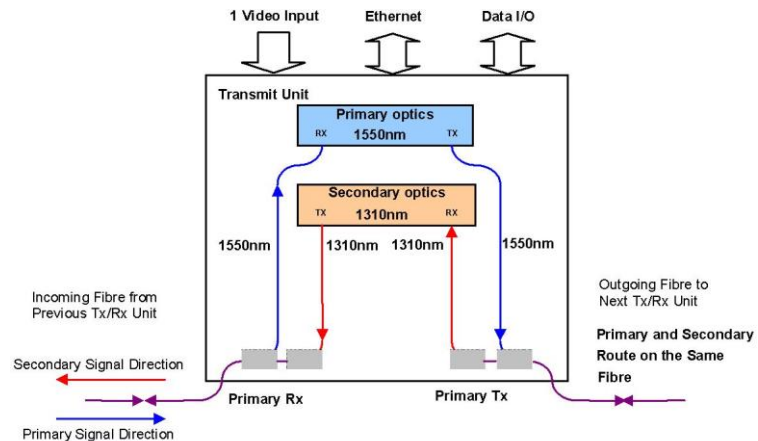

The **AMG3717E-DR-SF** receives and drops off data and Ethernet signals transmitted from an **AMG3788EN-DR-SF** receiver. It then inserts video, data and Ethernet signals onto the outgoing optical signal.

As each unit regenerates the optical signal, the optical dynamic range between each optically connected node is 17dB.

### Video Input Channel Configuration

At the **AMG3717E-DR-SF** or rackmount **AMG3717ER-DR-SF** insert unit, video signals present at the BNC inputs can be inserted on one to eight video channels transmitted on the optical fibre. The first video channel number of each insert unit is set by the rotary switch on the front panel of the unit.

It is normal to set each insert unit to a different channel number. If the same number is used twice, an insert unit connected 'down stream' on the primary optical route will 'over-write' any coincident video channels coming from the previous insert unit and those video signals will be lost.

The switch channel numbers 1 to 8, correspond to video channels 1-8. Unused switch channel numbers 0 & 9 duplicate video channel selections 1 & 8 respectively. i.e. setting switch to position 0 or 1 selects video channel 1 and setting switch to position 8 or 9 selects channel 8.

### Dual Redundant Operation

In normal operation where optical connection to both the previous unit and subsequent insert units is OK, video and data signals are transmitted on the primary output and data is received from the primary input. The secondary optical input is independent and is regenerated on the secondary output.


If the primary input signal is not present, a unit will shut down the secondary output to inform the previous unit that the signal route is not OK. The previous unit will then send out the video and data signals on its secondary output in the opposite direction. This signal will be repeated around the ring to get back to this unit on the secondary route. As the primary input is not present on this unit, the data signal will now be taken from the secondary optical input thus maintaining integrity of the data transmission.

If the secondary input signal is not present, an insert unit will assume that the route to the next unit is not OK and send out the video and data signal on the secondary optical output. This video and data will be transmitted to the next unit around the ring in the opposite direction on the secondary route.


## Optical Connection

The **AMG3717E-DR-SF** or rackmount **AMG3717ER-DR-SF** is designed to be connected in a ring or point to point system.


In a ring system, single, dual and four channel insert units respectively can be combined to make up an 8 channel video transmission system as illustrated below.

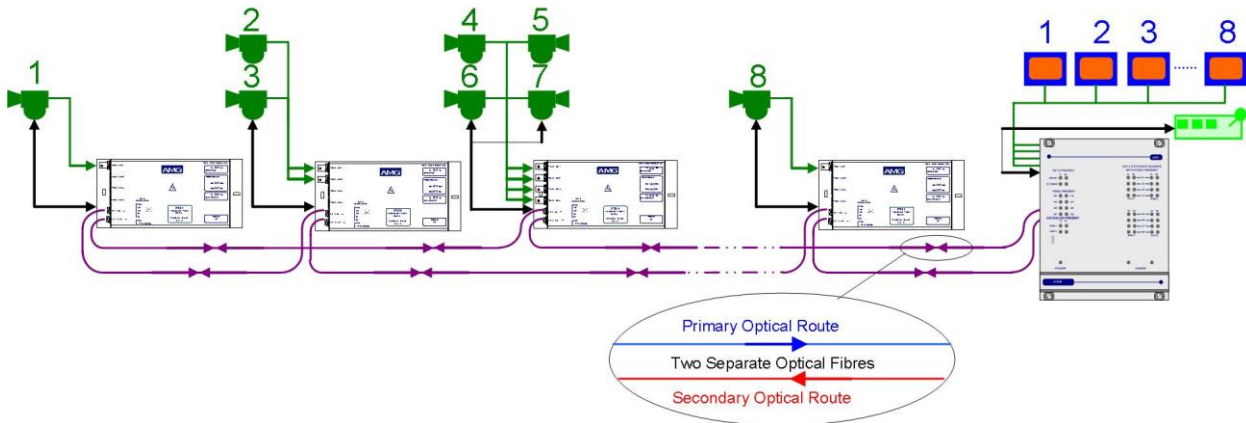

If a fibre link is broken, operation of the ring continues by making use of the secondary optical fibre route as below:

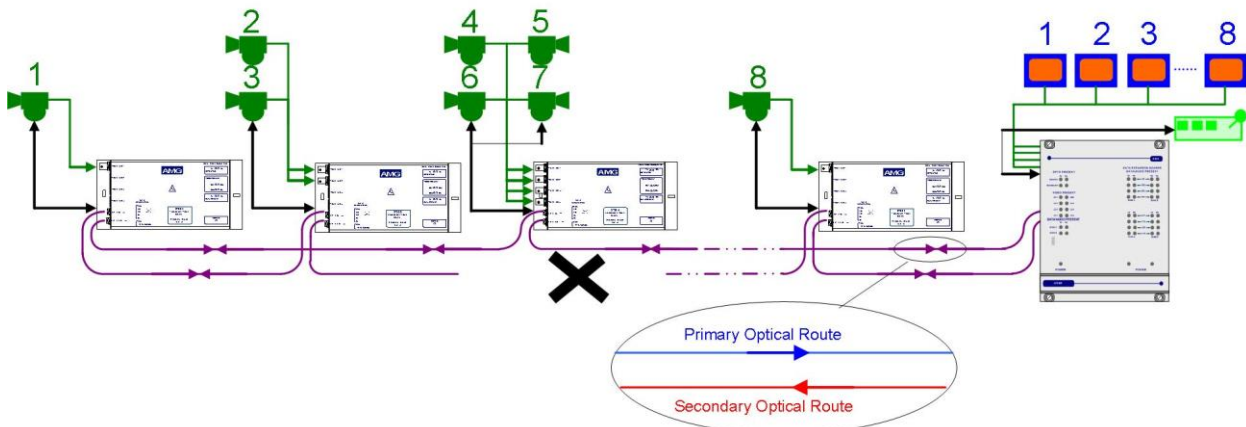

If multiple breaks occur, operation is maintained with all the units still physically connected to the receiver. For the scenario shown below camera signals and control would now be lost from cameras 1, 2 and 3 as there is now no physical connection between the transceivers and the receiver. However operation of cameras 4,5,6,7 and 8 remains fully functional.

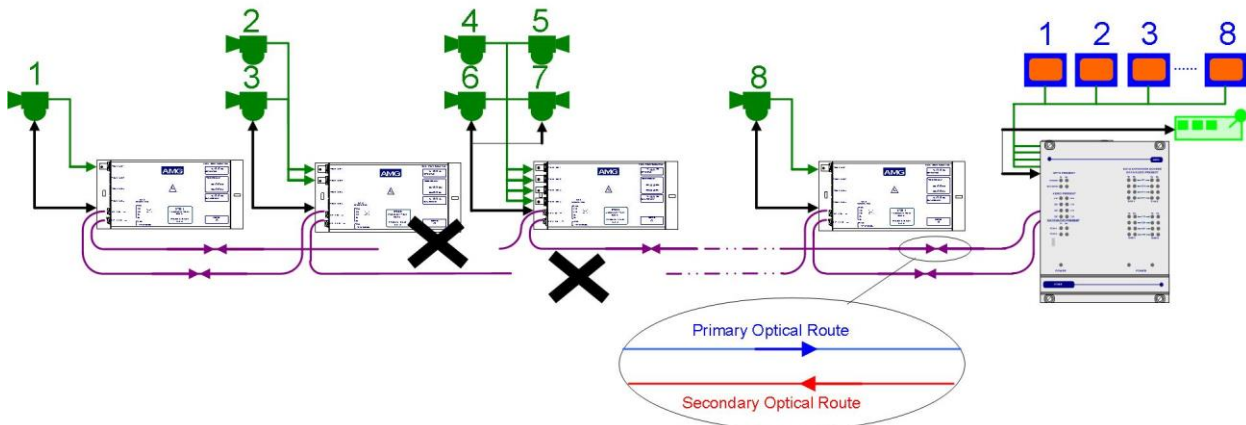

## **Connections**

---

### **Video Input Connections**

No. of channels..... 1  
Connector ..... 75 ohm BNC Socket.  
Input Impedance ..... 75 ohm terminated.  
Input Level ..... 1 volt p-p nominal  
Frequency Response ..... 10Hz to 7MHz.

### **Optical Connections**

#### **PRIMARY OPTO OUT**

Connector ..... LC/PC  
Primary Optical Launch Power ..... -5dBm  
Wavelength..... 1550nm  
Secondary Optical Sensitivity ..... -22dBm  
Wavelength..... 1310nm

#### **PRIMARY OPTO IN**

Connector ..... LC/PC  
Primary Optical Sensitivity ..... -22dBm  
Wavelength..... 1550nm  
Secondary Optical Launch Power ..... -5dBm  
Wavelength..... 1310nm

### **Power Connection**

Connector Type ..... 2.1mm screw lock long power jack – centre positive  
Connector Partno. .... Switchcraft S761K, AMG G16125-00  
Supply Voltage ..... 13.5 to 18.0 Volts DC.  
Maximum Power ..... 15 Watts

### **Ethernet Connection**

Ethernet Data Connector ..... RJ45  
Interface..... Auto-negotiation up to 100BASE-TX full duplex  
Ethernet Data Rate..... Maximum 50Mbps/s total Ethernet traffic on fibre

### **Data Channel Connections**

Total No. of Data Channels ..... 16 channels  
  
Data/Audio Channels – BANK A ..... 8 channels  
Data/Audio Channels – BANK B ..... 8 channels  
Connectors ..... Two 37-way D-Type female connectors - shielded.  
Connections..... See below for connection and configuration

For the data or audio channels to be present, the appropriate data daughter boards have to be fitted into the data expansion board slots.

## Data and Audio Channel Configuration

The **AMG3717E-DR-SF** and rackmount equivalent **AMG3717ER-DR-SF** sends and receives data in two banks - Bank A and Bank B each of which carries up to 8 channels of data / audio. The physical interface is determined by the fitting of AMG data or audio daughter boards onto the appropriate data expansion board slots.

### Data Interface Daughter Board Options

The data interface daughter board options are as follows:


Option Code 'x'	Part No.	Description
0	X12542	4 Wire Audio Interface Daughter Board
1	X04057	RS422/485 Data Interface Daughter Board
2	X04049	RS232 Data Interface Daughter Board
3	X04058	20mA Current Loop Data Interface Daughter Board
4	X12579	TTL Data Interface Daughter Board
5	X12578	Contact Closure Data Interface Daughter Board
6	X13038	FTT10A Echelon Lonworks Data Interface Daughter Board

## Data and Audio Channel Configuration

The data expansion board slots are accessed by removing the AMG unit from its case. A data channel is active when a daughter board is installed in the required data channel slot. Each data interface board enables one bi-directional channel.

### Daughter Board Layout

The channel slots are as follows:

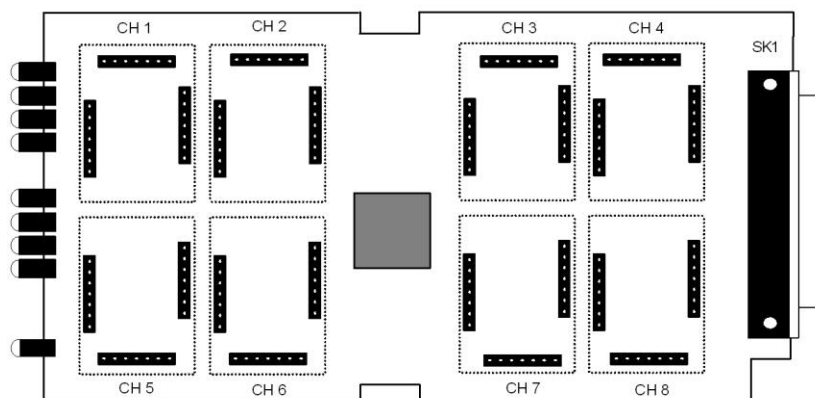


### Data and Audio Daughter Board Fitting Instruction

The data and audio daughter boards pushed on to the pin headers mounted on the data expansion boards. Ensure that the connectors are lined up correctly and not offset before pushing firmly in place. Note that the data and audio channel numbers are associated with each slot. This allocates the pin numbers on the rear panel connector together with the front panel LED indicators.

## Data and Audio Connections

The BANK A/B data/audio channels pin connections on the rear panel connectors are as follows:

Pin No.	Description	Bank
1	Audio/Data CH1 IN + (A)	A/B
2	Audio/Data CH1 IN - (B)	A/B
3	Audio/Data CH2 IN + (A)	A/B
4	Audio/Data CH2 IN - (B)	A/B
5	Audio/Data CH3 IN + (A)	A/B
6	Audio/Data CH3 IN - (B)	A/B
7	Audio/Data CH4 IN + (A)	A/B
8	Audio/Data CH4 IN - (B)	A/B
9	GND	A/B
10	GND	A/B
11	GND	A/B
12	Audio/Data CH5 IN + (A)	A/B
13	Audio/Data CH5 IN - (B)	A/B
14	Audio/Data CH6 IN + (A)	A/B
15	Audio/Data CH6 IN - (B)	A/B
16	Audio/Data CH7 IN + (A)	A/B
17	Audio/Data CH7 IN - (B)	A/B
18	Audio/Data CH8 IN + (A)	A/B
19	Audio/Data CH8 IN - (B)	A/B

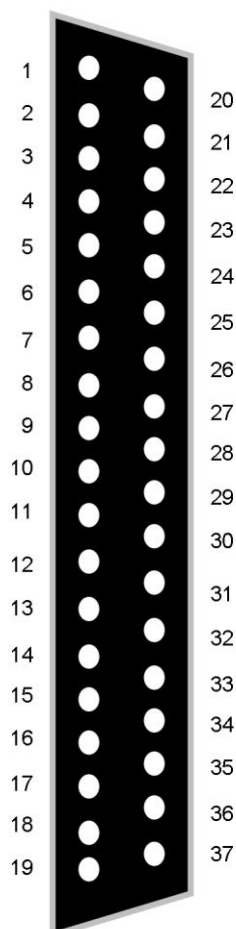

Pin No.	Description	Bank
20	Audio/Data CH1 OUT + (A)	A/B
21	Audio/Data CH1 OUT - (B)	A/B
22	Audio/Data CH2 OUT + (A)	A/B
23	Audio/Data CH2 OUT - (B)	A/B
24	Audio/Data CH3 OUT + (A)	A/B
25	Audio/Data CH3 OUT - (B)	A/B
26	Audio/Data CH4 OUT + (A)	A/B
27	Audio/Data CH4 OUT - (B)	A/B
28	GND	A/B
29	GND	A/B
30	GND	A/B
31	Audio/Data CH5 OUT + (A)	A/B
32	Audio/Data CH5 OUT - (B)	A/B
33	Audio/Data CH6 OUT + (A)	A/B
34	Audio/Data CH6 OUT - (B)	A/B
35	Audio/Data CH7 OUT + (A)	A/B
36	Audio/Data CH7 OUT - (B)	A/B
37	Audio/Data CH8 OUT - (B)	A/B

Note: (A) or (B) in brackets in above table refers to RS485/RS422 data specification not Bank A, B.

See Data or Audio Daughter Board Instruction Sheet for meaning of Audio/Data IN+, Audio/Data IN-, Audio/Data OUT+, and Audio/Data OUT- for each data type.

## **Ethernet Operation**

---

In order for the AMG system to transmit Ethernet signals, an onboard RJ45 Ethernet interface or X16003 Ethernet interface adaptor should be fitted to all units in the ring.

The Ethernet interface can operate at either 10Mbits/s half duplex, or 100Mbit/s full duplex. When all the Ethernet interfaces around the ring are operating at 100Mbit/s full duplex the system behaves as a multi-port repeater. Data transmitted on any one port is transmitted out on all other ports with the minimum of delay or buffering. The nominal bandwidth available for Ethernet transmission within the ring is 100Mbit/s when Ethernet only, or 50MBit/s when the low speed data option is also used. If one node is transmitting, the entire bandwidth is available for this traffic. If multiple nodes transmit simultaneously on the ring, then the bandwidth is shared between each node as required. With similar traffic at each node the sharing would be nominally equal.

Although the limit for the number of video channels which can be transmitted around the ring is eight, up to 64 nodes can be attached for distributing Ethernet signals with the bandwidth sharing implemented. The units use Flow Control (Pause Frames) to limit the access to the ring to share the bandwidth and to ensure that no data is lost. When an Ethernet port is operating at 10Mbits/s half duplex, this port will now only receive data from a receive unit rather than all ports as when operating at 100Mbits/s full duplex.

The 100BaseT port does not implement MDI/MDIX; it should be connected with a straight though cable to an external switch port and with a cross over cable when connected directly to a PC or DTE.



## Front Panel Indicators

---

### Power LED

Power .....	Green	-	unit powered
	Off	-	no power applied to unit

### Video Input LED's

Video Present CH1 .....	Green	-	video signal present on input BNC
	Org	-	channel present but no video on I/P BNC

### Fibre Optic LED's

Primary Opto Sync TX .....	Green	-	optical channel transmitting
	Off	-	optical channel not transmitting
Primary Opto Sync RX .....	Green	-	optical channel receiving
	Org	-	optical channel receiving but not sync.
	Off	-	optical channel not receiving
Secondary Opto Sync TX .....	Green	-	optical channel transmitting
	Off	-	optical channel not transmitting
Secondary Opto Sync RX .....	Green	-	optical channel receiving
	Org	-	optical channel receiving but not sync.
	Off	-	optical channel not receiving

### Low Speed Data LEDs

#### **BANK A or B** (When RS232 data daughter board fitted)

Data Present CH1-16 TX .....	Green	-	logic zero (+V) present on IN+
	Red	-	logic transitions present on IN+
	Off	-	logic one (-V) present on IN+

This represents the data signals being transmitted on the optical fibre

Data Present CH1-16 RX .....	Green	-	logic zero (+V) present on OUT+
	Red	-	logic transitions present on OUT+
	Off	-	logic one (-V) present on OUT+

This represents the data signals being received on the optical fibre

#### **BANK A or B** (When RS485 / RS422 data daughter board fitted)

Data Present CH1-16 TX .....	Green	-	logic zero (+V, -V) present on IN+, IN-
	Red	-	logic transitions present on IN+, IN-
	Off	-	logic one (-V, +V) present on IN+, IN-

This represents the data signals being transmitted on the optical fibre

Data Present CH1-16 RX .....	Green	-	logic zero (+V, -V) present on OUT+, OUT-
	Red	-	logic transitions present on OUT+, OUT-
	Off	-	logic one (-V, +V) present on OUT+, OUT-

This represents the data signals being received on the optical fibre

**BANK A or B** (When audio daughter board fitted)

Audio Present TX.....	Green	-	audio present > -40dBm
	Red	-	audio present > 0dBm (overload at +6dBm)
	Off	-	audio not present or < -40dBm

This represents the data signals being transmitted on the optical fibre

Audio Present RX .....	Green	-	audio present > -40dBm
	Red	-	audio present > 0dBm (overload at +6dBm)
	Off	-	audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

## **Physical Information**

---

### **Dimensions**

Height ..... 132mm  
Width ..... 172mm (excluding connectors)  
Depth ..... 105mm  
Weight ..... 1200grams

### **Mounting Details**

The unit is designed to be mounted on a panel using 4 off 4.0mm screws, see diagram on page 1.

### **Removal / replacement from / to the Case**

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case.  
Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

## **Safety**

---

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

## **Maintenance and Repair**

---

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

This page is intentionally blank.