


AMG5625R Instruction Manual

Dual System with 2x Independent Channels each of :

[Single Channel Video Transmit Unit with one Bi-directional Data Channel and two Uni-directional Alarms for a Multimode Fibre Link]

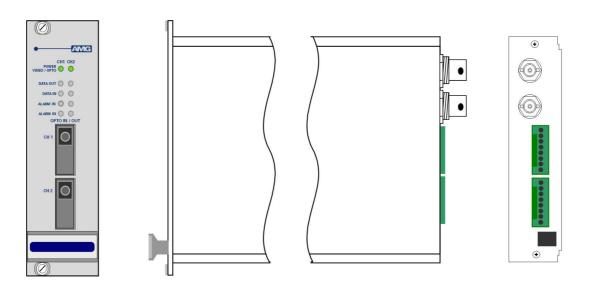

The **AMG5625R** is a **DUAL** rackmount system which provides two independent channels, each designed to transmit 1 video signals plus 2 Uni-directional alarms and transmit and receive 1 data signal over one Multimode optical fibre.

The **AMG5625R** is designed to plug into an **AMG2009** or **AMG2015** subrack, which in turn fits into a 19" rack system.

The **AMG5625R** is designed to operate with an **AMG5626** or rackmount **AMG5626R** dual channel video receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents

Introduction	3
Unit Functional Schematic	3
Optical Connection	
Connections	4
Video Output Connections	4
Optical Connections Multimode	
Power Connection	
Data and Alarm Channel Connections	4
Front Panel Indicators	5
Power LED	5
Low Speed Data LEDs	5
Alarm LEDs	5
Data and Alarm Channel Configuration	6
Data Channel Configuration	6
Data Interface Connections	
Alarm Channel Configuration	
Alarm Interface Connections	7
Physical Information	8
Dimensions	
Mounting Details	8
Safety	8
Maintenance and Repair	8

Introduction


Unit Functional Schematic

The **AMG5625R** provides two independent, receive channels.

Each channel transmits 1 video plus 1 data and 2 uni-directional alarm signals to the **AMG5626** receive unit.


It also receives 1 data signal transmitted from the **AMG5626**.

The schematic diagram shows one of the two available channels of the **AMG5625R**

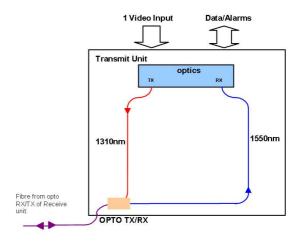

Optical Connection

The AMG5625R connections are illustrated in the following example which shows an AMG5625R transmit unit together with an AMG5626R two channel rackmount receive unit configured as a dual channel point to point system.

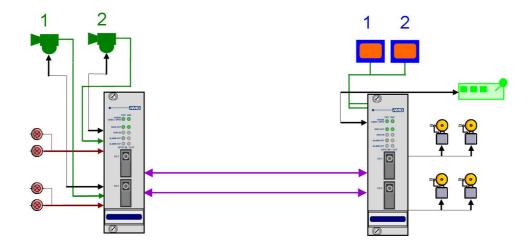

Connections

Video Output Connections

Optical Connections Multimode

Power Connection

Power supplyFrom plug in connection on the AMG2009 or AMG2015 subrack Power consumption2.5 Watts max.

Data and Alarm Channel Connections

No. of Data Channels No. of Alarms	
Connectors Connector Partno	Removable 8-pin, 2.5mm, Spring TerminalPhoenix 1881383
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to access to the data switches
Alarm inputs	Contact Closure pull-up is 330R to +3V3

^{**}Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbits/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

Front Panel Indicators

Power LED

Red - No opto sync.

Off - No power applied to unit

Low Speed Data LEDs

Data Present IN (RS485 or RS422) Green - logic zero (+V, -V) present on IN+, IN- Red - logic one (-V,V+) present on IN+, IN-

Off - tri-state off or no connection on IN+, IN-

Data Present IN (RS232) Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT-

Red - logic one (-V,+V) present on OUT+, OUT-Off - tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232) Green - logic zero (+V) present on OUT+

Red - logic transitions present on OUT+
Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs


Channel 1

Channel 1			
ALARM 1 IN	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
ALARM 2 IN	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
Channel 2			
ALARM 1 IN	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
ALARM 2 IN	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

Data and Alarm Channel Configuration

The **AMG5625R** transmit unit sends and receives data to/from an **AMG5626** or rackmount equivalent **AMG5626R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

There are also two uni-directional alarm inputs provided for each video channel. Each alarm input is typically connected to a contact closure switch.

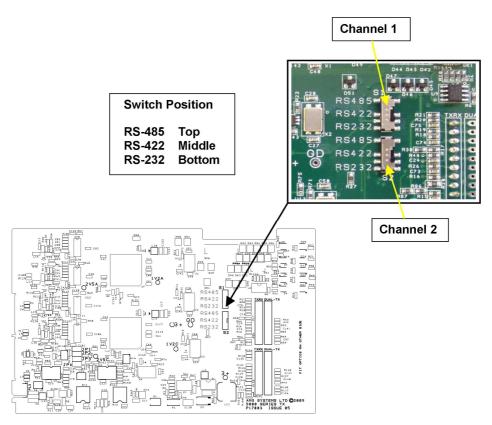

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above $5k\Omega$. If the third party bias resistors are less the 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

Data Channels 1 and 2.

	Data Channel		
Connector Pin No.			
PIII NO.	RS-485	RS-422	RS-232
	[switch top]	[switch middle]	[switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The **AMG5625R** provides two uni-directional alarm / contact closure inputs fro each video channel. Each alarm input is typically connected to a contact closure switch.

Each ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

Alarm Interface Connections

Video Channels 1 and 2.

	Alarm Interface		
Connector Pin	Additi illellace		
No.	Alarm 1	Alarm 2	
1			
2			
3	ALARM 1 GND		
4	ALARM 1 IN+		
5		ALARM 2 GND	
6		ALARM 2 IN +	
7			
8			

Physical Information

Dimensions

Height	3U Plug-in
Width	•
Depth	170mm excluding connectors
Weight	

Mounting Details

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com