


AMG87x3/4 User Manual

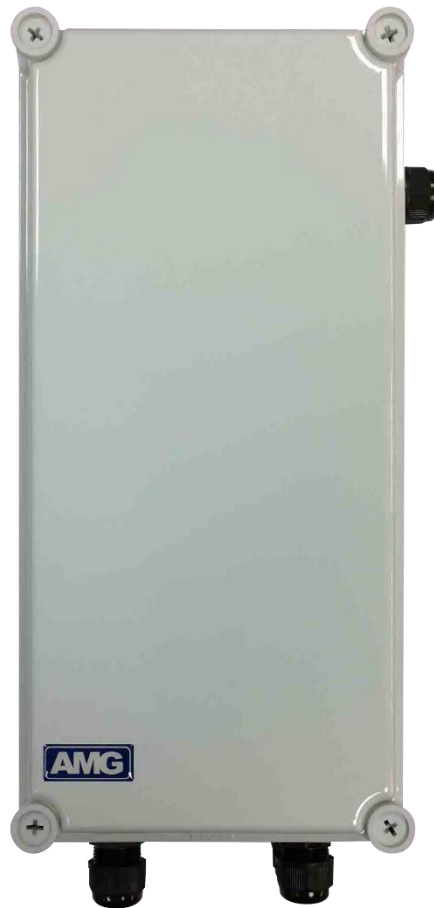

HEAD OFFICE:

ADDR: 3 THE OMEGA CENTRE, STRATTON BUSINESS PARK, BIGGLESWADE, BEDFORDSHIRE, SG18 8QB

TEL: +44 (0) 1767 600 777

FAX: +44 (0) 1767 600 077

WEB: www.amgsystems.com

EMAIL: sales@amgsystems.com

Issue History

Issue	Date	Author	Changes
00	27 Nov, 2013	J Homsey	Preliminary Draft
01	26 Sept, 2016	JH	Removed draft status

1. Before You Begin

Read these instructions carefully before installing or operating this product.

Note: This equipment should be installed by a qualified service person and should conform to local and national regulations.

This manual provides installation and operation information. To use this document you must have the following minimum qualifications:

- A basic knowledge of IP networks and configuration.
- A basic knowledge of electrical wiring and low-voltage electrical connections.
- An RJ45 connector that supports the transfer rate of 10/100Mbps.
- A PC with one of the following Web Browsers:
 - Microsoft Internet Explorer
 - Mozilla Firefox
 - Google Chrome

1.1. Intended Use

Use this product only for the purpose for which it was designed, as described in this manual.



WARNING:
Improper use or deployment of this equipment could cause severe bodily injury or equipment damage

1.2. Manufacturer's Declaration of Conformance

A Declaration of Conformity in accordance with the following EU standards has been made and is kept on file at the address shown on the last page.



The manufacturer declares that the product supplied with this document is compliant with the provisions of the EMC Directive 89/336, the Low Voltage Directive LVD 73/23, the CE Marking Directive 93/68 EEC and all associated amendments.

2. Radio frequency Interference Requirements

The operation of this device in the 5.15 GHz to 5.25 GHz frequency range is restricted to indoor use. FCC regulations require this product to be used indoors while operating at 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference. However, the operation of this device in the 5.25 GHz to 5.35 GHz frequency range is allowed for both indoor and outdoor use. High power radars are allocated as primary users of the 5.25 GHz to 5.35 GHz and 5.65 GHz to 5.85 GHz bands. These radar stations can cause interference with and/or damage to this device.

2.1. FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. No guarantee exists that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the radio/TV receiving antenna.
- Increase the separation between the equipment and the radio/TV receiver.
- Connect the equipment into an outlet on a circuit different from that to which the radio/TV receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Modifications made to the product, unless expressly approved by **AMG Systems Ltd**, could void the user's authority to operate the equipment.

2.2. RF Exposure Requirements

To ensure compliance with FCC RF exposure requirements, the antenna used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or radio transmitter. Installers and end-users must follow the installation instructions provided in this user guide.

2.3. CE Statement

The AMG Digital Wireless system is intended to be used by suitably trained individuals or organisations that are familiar with the requirements of the R&TTE directive. In particular the client must ensure that appropriate antennas and transmit power levels are selected to ensure that all power limits are met. Hereby, AMG Systems Ltd declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC. However, the use of the following warning symbol:



Means that this equipment is subject to restrictions of use in certain countries and selection of the correct country of operation (country code) will ensure that the device operates only on the frequencies permissible within that country. It is also the operator's responsibility to ensure that appropriate licenses have been sought when operating on licensed frequencies, for example UK Band C, 5725-5850 MHz.

2.4. Copyright Information

Copyright ©2013 all rights reserved. No part of this publication may be reproduced, adapted, stored in a retrieval system, translated into any language, or transmitted in any form or by any means without the written permission of the supplier.

Table of Contents

1. Before You Begin	3
1.1. Intended Use	3
1.2. Manufacturer's Declaration of Conformance	3
2. Radio frequency Interference Requirements	4
2.1. FCC Warning	4
2.2. RF Exposure Requirements	4
2.3. CE Statement	5
2.4. Copyright Information	5
3. Declaration of Conformity.....	8
4. Introduction	9
5. Site Installation.....	10
6. Wiring Guide.....	13
6.1. Mains Power.....	13
Video 14	
6.2. Data & Audio	14
7. Key Features	15
7.1. Unmanaged Ethernet PoE Switch.....	15
7.2. Wireless Radio	15
7.3. Video Encoder/Decoder	16
8. Video Encoder/Decoder	17
8.1. Operation Modes	17
8.2. Installation.....	17
8.3. Remote Video Monitoring	19
8.4. Initialization of IP Address	21
8.5. Remote Configuration	22
8.5.1. Remote Configuration.....	22
8.5.2. Encoder Configuration	22
8.5.2.1. System Configuration	23
8.5.2.2. Video Configuration	25
8.5.2.3. Audio Configuration	29
8.5.2.4. Network Configuration.....	30
8.5.2.5. Serial Port Configuration	33
8.5.2.6. Event Configuration	35

8.5.2.7.	<i>Preset Configuration</i>	38
8.5.2.8.	<i>User Configuration</i>	39
8.5.3.	Decoder System	42
8.5.3.1.	<i>Video Configuration</i>	43
8.5.3.2.	<i>Network Configuration</i>	44
8.5.3.3.	<i>Event Configuration</i>	46
Appendix A: Sensor and Alarm Port		48
Appendix B: Serial Port		49
Contact Information		51

3. Declaration of Conformity

AMG Systems Ltd. declares the following:

Product Name: AMG Digital Wireless

Model No AMG8713, 8714, 8723, 8724, 8743, 8744 conforms to the following Product Standards:

This device complies with the Electromagnetic Compatibility Directive (89/336/EEC) issued by the Commission of the European Community. Compliance with this directive implies conformity to the following European Norms (in brackets are the equivalent international standards.)

Electromagnetic Interference (Conduction and Radiation): EN 55022 (CISPR 22)

Electromagnetic Immunity: EN 55024 (IEC61000-4-2, 3, 4, 5, 6, 8, 11)

Low Voltage Directive: EN 60 950: 1992+A1: 1993+A2: 1993+A3: 1995+A4: 1996+A11: 1997: 2006/95

Therefore, this product is in conformity with the following regional standards: FCC Class B: following the provisions of FCC Part 15 directive, **CE Mark:** following the provisions of the EC directive.

AMG Systems Ltd. also declares that:

The wireless card in this product complies with the R&TTE Directive (1999/5/EC) issued by the Commission of the European Community. Compliance with this directive implies conformity to the following:

EMC Standards: FCC: 47 CFR Part 15, Subpart B, 47 CFR Part 15, Subpart C (Section 15.247); CE: EN 300 328-2, EN 300 826 (EN 301 489-17)

Therefore, this product is in conformity with the following regional standards: FCC Class B: following the provisions of FCC Part 15 directive, **CE Mark:** following the provisions of the EC directive.

4. Introduction

The Digital Wireless product range is designed for enterprise and public access applications. Depending on the model, the unit incorporates an unmanaged Ethernet PoE switch, a Digital Wireless radio and either Encoders or Decoders.

The Unmanaged Ethernet switch provides 5 standard RJ45 ports with up to 1Gb speed supported on each port. Ports 1 to 4 can also provide Power over Ethernet in compliance with the IEEE802.3af or 802.3at standard (depending on power supply variant).

The Encoder/Decoder units are a video and audio surveillance transmission system. The Encoder system compresses and transmits video data. The Decoder receives and decompresses video data.

The wireless radios are embedded with the Atheros chipset; it boasts network robustness, stability and wider network coverage. Based on 802.11n specification, the Digital Wireless range supports high-speed data transmission of up to 300Mbps.

The access point is capable of operating in different modes, which makes it suitable for a wide variety of wireless applications, including long-distance deployments.

Designed with dual polarization high gain antenna it offers a compact, rugged design for outdoor installation and excellent performance.


To protect your security and privacy, the Digital Wireless range is armed with many enhanced and latest wireless security features such as IEEE 802.11i standards, MAC Address Filtering, IEEE 802.1x Authentication and AES/TKIP & 64/128-bit WEP (Wired Equivalent Privacy) to ensure privacy for the heterogeneous mix of users within the same wireless network.

5. Site Installation



To mount the main enclosure on a pole, you will need the ENC2842 mounting kit.



Align mounting brackets with holes on rear of enclosure.

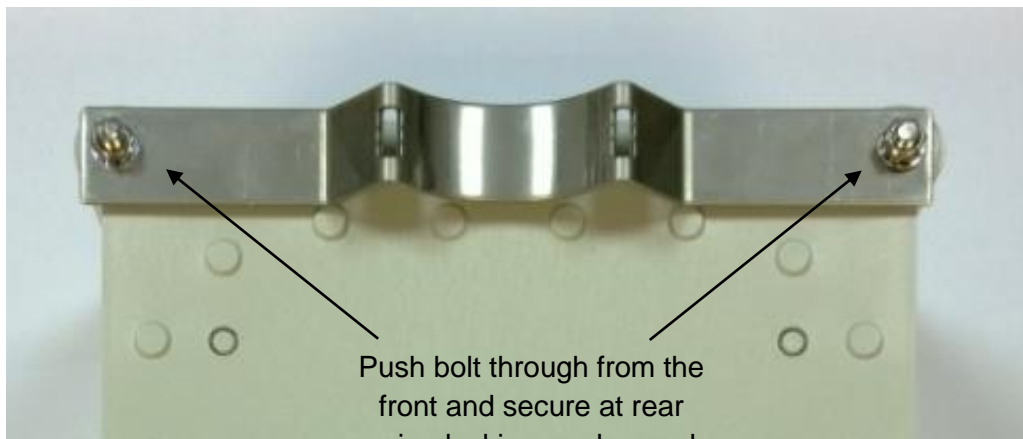

Push bolt through from the front and secure at rear using locking washer and nut provided.

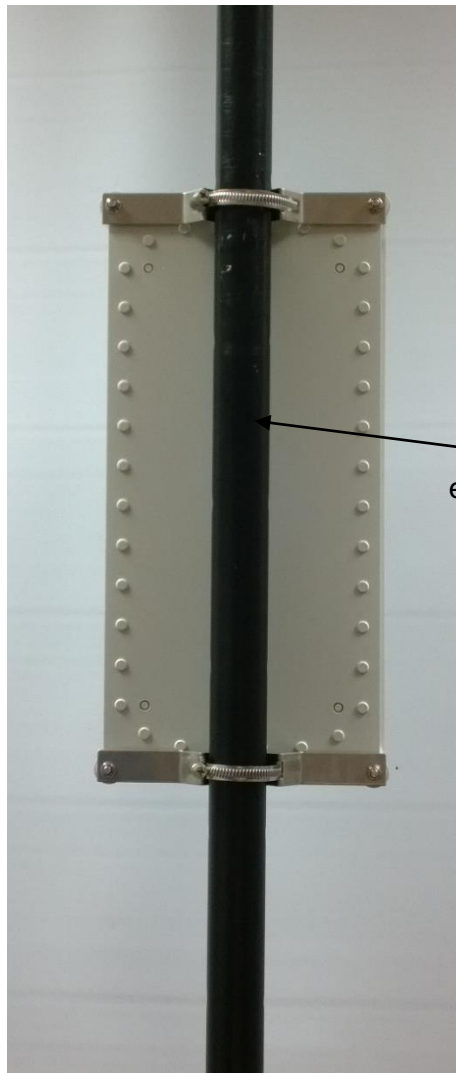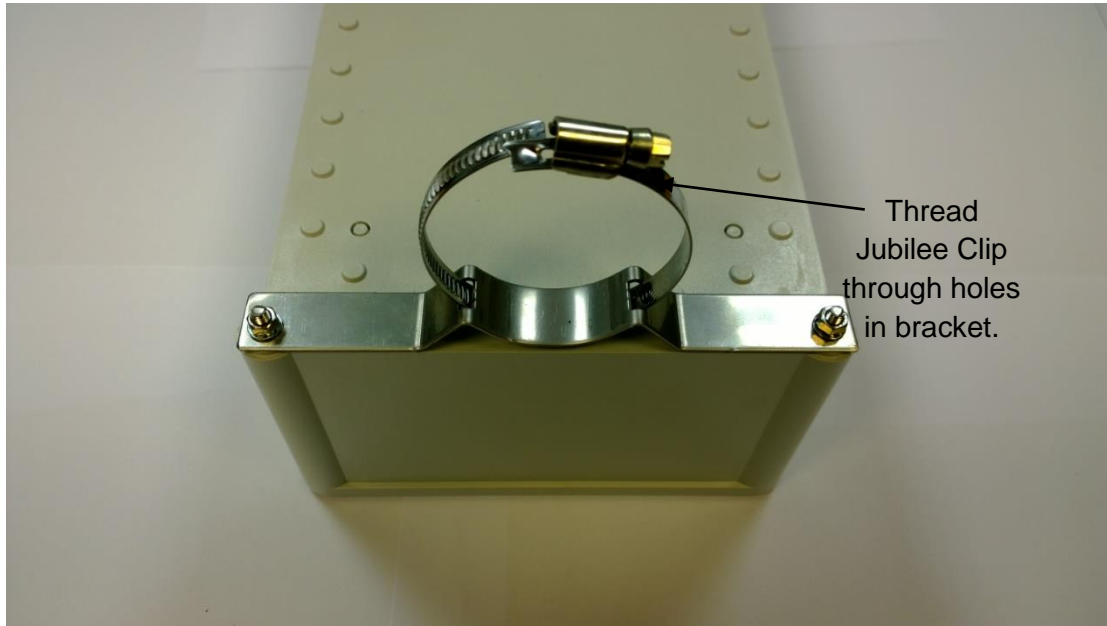



Radio and Encoder/Decoder housing mounted on the same pole.

6. Wiring Guide

6.1. Mains Power




Insert mains cable through one of the glands and connect to the power supply before securing it in place using the cable clamp.

Video

Encoder (AMG8723)

Decoder (AMG8724)

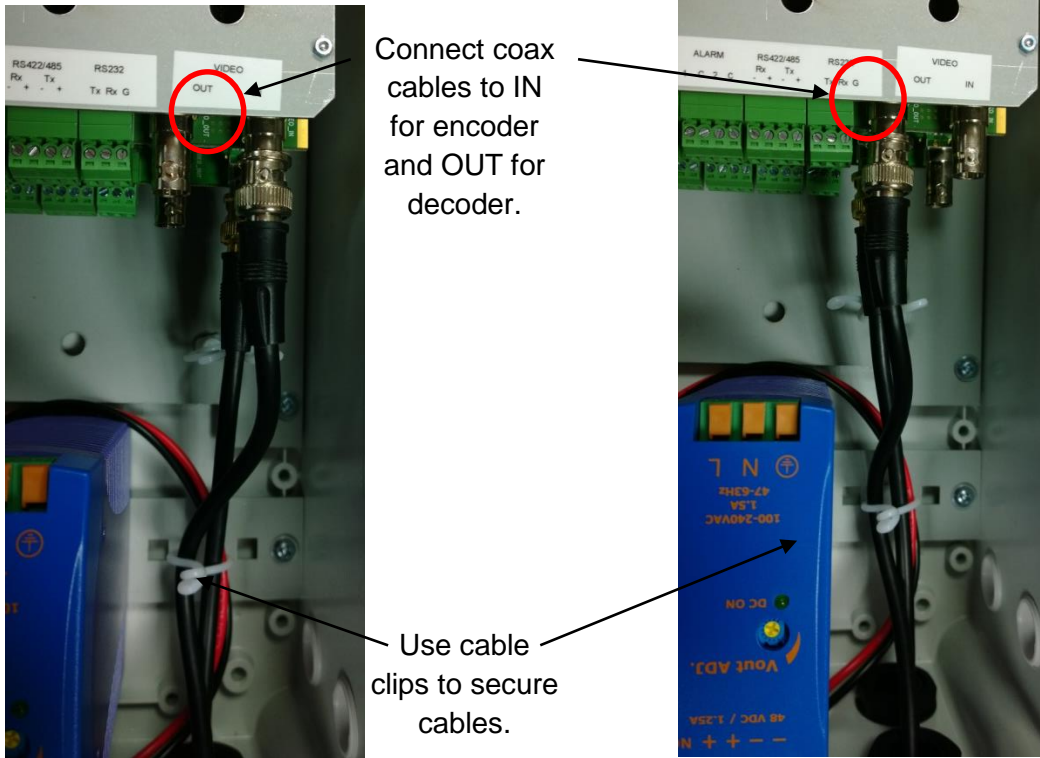

6.2. Data & Audio



Connect data and audio equipment to the relevant connectors if needed.

7. Key Features

7.1. Unmanaged Ethernet PoE Switch

- Power LED
- Link/Activity LEDs
- PoE LEDs
- PoE on Ports 1-4
- 10/100/1000Mbps data rates

7.2. Wireless Radio

- Features 300Mbps data rate by incorporating OFDM technology
- IEEE 802.11a compatible
- MAC address control
- Easy to install and friendly to use, just plug and play
- Provides Web-based configuration utility
- Compact design with lightweight, compact size, and low power consumption
- Supports Power over Ethernet
- Built in Dual Polarized MIMO Antenna
- Weatherproof, can be used outdoors
- WPA/WPA2

7.3. Video Encoder/Decoder

- **Video**
 - High-quality compression algorithm, H.264 & MJPEG support
 - Compression in various resolutions: CIF, Half-D1 and D1
 - Wide range of video transmission rates: 32kbps ~ 8Mbps
 - Various transmission modes: CBR and VBR
 - Motion Detection

- **Audio**
 - Multi-transmission modes: Uni-direction (Encoder -> Decoder, Decoder -> Encoder), Bi-direction

- **Network**
 - Fixed IP & Dynamic IP(DHCP) support
 - 1:1, 1:N support
 - Multicasting
 - Automatic transmit rate control according to network conditions

- **Serial Data**
 - Two serial ports
 - Various PTZ camera protocols
 - Data pass-through mode: Serial data communication between Encoder – Decoder

- **Sensor and Alarm**
 - Support direct connections of external sensors and alarm devices.
 - Event Alarms

- **USB**
 - Connection to internal or external USB storage for remote access

- **User Interface**
 - System status display utilizing OSD (On Screen Display)
 - Diagnose and upgrade through dedicated program called True Manager
 - System configuration using Internet Explorer

- **High Reliability**
 - Reliable embedded system
 - System recovery utilizing dual watch-dog functions

8. Video Encoder/Decoder

8.1. Operation Modes

The Following chart shows possible combinations of video, audio and serial data transmission.

System Mode	Video	Audio	Serial Data
Encoder	Transmit	Transmission/Receive	Transmit/Receive
Decoder	Receive	Transmission /Receive	Transmit/Receive

Therefore, the system modes are defined by the video communication and all system modes are capable of bi-directional transmission of audio or serial data.

8.2. Installation

1. Connecting Video

◆ Encoder System

- Connect camera video output line to the encoder video input port.

◆ Decoder System

- Connect monitor video input line to the decoder video output port.

2. Connecting Audio

Audio is bi-directional in any configuration regardless of the system mode. If necessary, it can be configured to be in transmit-only, receive -only or bi-directional mode.

- Connect audio input and output ports to audio devices accordingly.
- Audio signal is line level 1V PP, therefore, a microphone or speaker with amplification function should be used.

3. Connecting Serial Ports

For camera control, PTZ controller (keyboard) and receiver can be connected to serial ports. Two corresponding serial ports in the encoder and decoder which are connected in a 1-to-1 fashion work in pass-through mode. This means that commands at a local system's COM1 port will be transparently passed to the remote system's COM1 port. Also, a command at a local system COM2 port will pass to the remote system's COM2 port.

4. Connecting Sensors and Alarms

Connect sensors and alarm devices to corresponding terminals accordingly.

6. Checking Operating

Once the power is supplied to the camera, it will start booting. The system will boot up to an operating mode after approximately 40-60 seconds. The green LED on the Ethernet port will flash indicating the system is ready.

Software provided on the disc called True Manager allows you to check the IP address and other network details of the camera/server. Please refer to the True Manager manual for instructions on how to find the IP address of the camera and if required changing it.

◆ Encoder LED Display

PWR	STATUS	LINK	DATA
○	○	○	○
Red	Green	OFF	OFF
	Blinking		

Above LED status display shows that neither camera is connected nor a decoder is connected. Once the encoder is connected to a decoder, colour of link LED will illuminate green and the LED will blink as video or audio transmissions occur.

◆ Decoder LED Display

PWR	STATUS	LINK	DATA
○	○	○	○
Red	Green	Red	OFF
	Blinking	Blinking	

Above LED status display shows that the encoder has started without connecting to an encoder. Once an encoder is connected, the colour of link LED will be changed to green and the LED will blink as video or audio data transmissions occurs.

8.3. Remote Video Monitoring

There are two ways to view the remote video when the connections are completed between a site and central system. In order for proper operation, an IP address must be set accordingly. Please refer to **True Manager** or **Remote Setting in Chapter 4 and 5** for further details.

■ Video Monitoring with Decoder System

Once the encoder IP address is set in the remote IP address section of the decoder, the decoder system will connect to the encoder system and start receiving the video images. Normally, a monitor connected to the decoder will display video images.


■ Video Monitoring using Internet Explorer

If the IP address is entered in Internet Explorer, the system will ask for confirmation to install Active-X control. Once authorized, Internet Explorer will start to display video images from the encoder as shown below.

http://192.168.10.100

Username: admin

Password: 1234

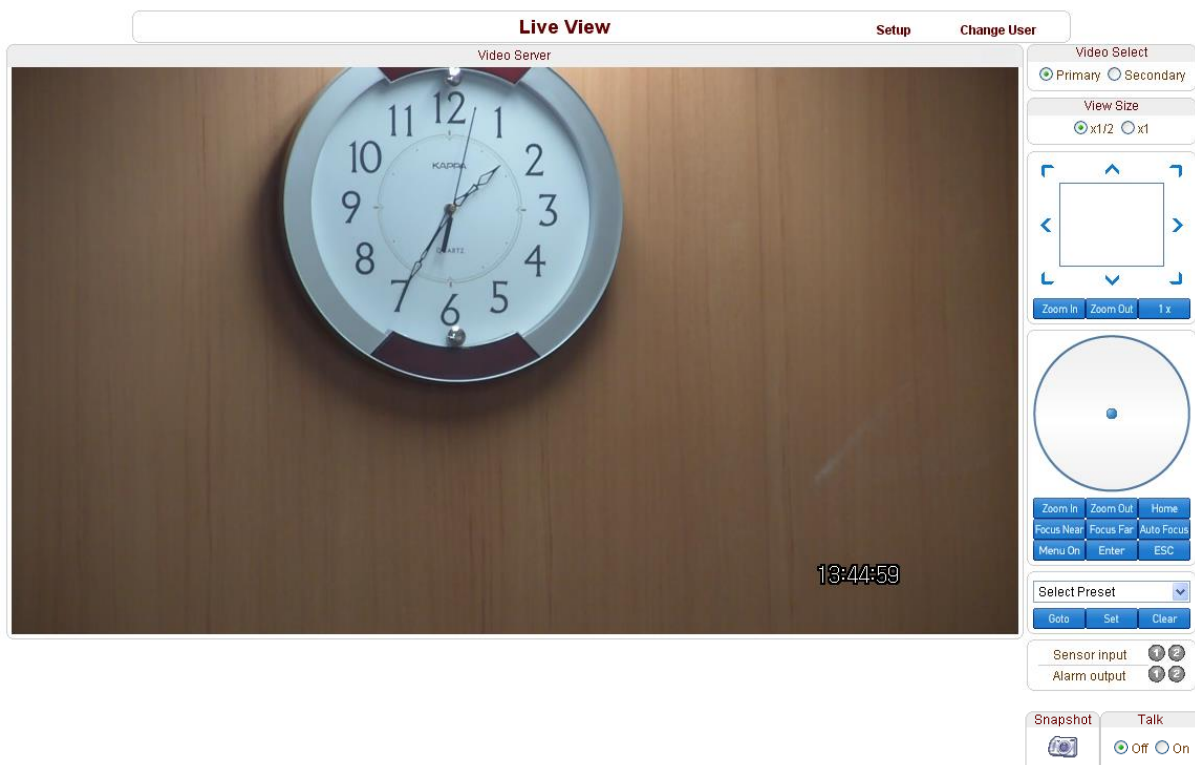

■ Video Selection


If Primary is selected, Max. 720 x 480 (NTSC) or 704 x 756 (PAL) via H.264 compression algorithm video can be displayed. And once activated Dual Video compression and a Secondary video stream may be selected, H.264 or MJPEG compression algorithm video can be displayed in this case.

■ Screen Size:

Adjustable Screen Size

■ Digital Zoom:

Max 5x Digital Zoom is available.

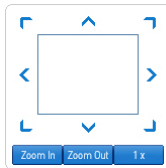**■ Focus Near, Focus Far, Auto Focus**

Adjust the focus

■ Sensor Input

When the sensor on the encoder/decoder is connected and working, the light turns red.

■ Alarm Output

Alarm Output button can triggered from an event directly from the Live View page.

■ Snapshot

Snapshot button saves a snapshot of the video image currently on display. Captured picture can be stored as a BMP or a JPEG file.

■ Talk

Transfer audio to connected audio device connected to.

8.4. Initialization of IP Address


If a system IP address is lost, the system can be reset to a known IP address using the reset button in the back of the system:

- ① While system is in operation, press the reset button more than 5 seconds.
- ② The system will reboot automatically
- ③ Once the system has been rebooted, IP address will be set to the following.
 - IP mode: Fixed IP
 - IP address: 192.168.10.100
 - Subnet mask: 255.255.255.0
 - Gateway: 192.168.10.1
 - Base port: 2222
 - Http port: 80
 - Username: admin
 - Password: 1234

8.5. Remote Configuration

8.5.1. Remote Configuration

The server can be configured using a web browser. Type the IP address of the encoder/decoder in the address input area of Internet Explorer, then a live view screen will be displayed. Press **Setup** button located in the upper right area of the monitoring screen, then the setup page for server setup will be displayed.

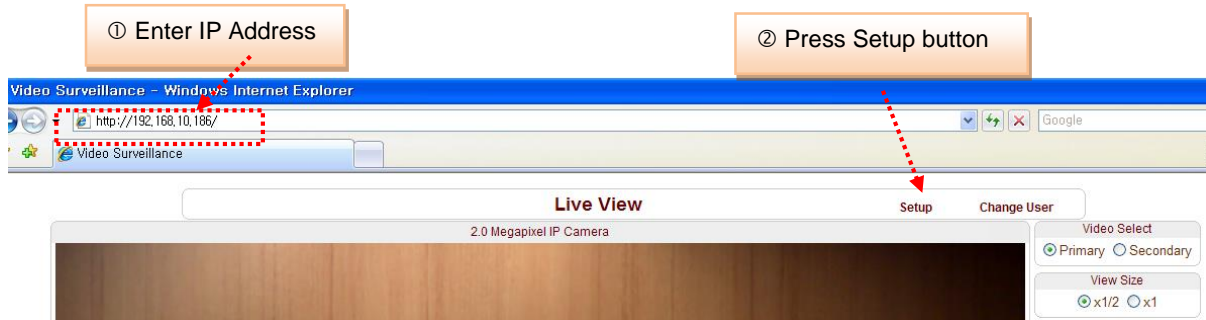

The remote configuration window may be slightly different depending on the system modes (Encoder, Decoder). The general explanation of the configuration in this manual is based on an Encoder system and differences according to the modes will be clarified when needed.

The configurations are grouped into 8 categories: **System**, **Video**, **Audio**, **Network**, **Serial**, **Event**, **Preset** and **User**. Any configuration changes are not applied until **Apply** is pressed. Leaving the page without pressing **Apply** button, changes in the page will be discarded.

8.5.2. Encoder Configuration

While most configuration items are common for Encoder, Decoder and Duplex mode, there are items which are relevant to specific system modes. All the configuration items for Encoder mode are explained first. Then, items specific only to Decoder and Duplex mode are described later. Sections for Decoder and Duplex will not include items common for all modes.

8.5.2.1. System Configuration

Setup

[Live View](#)
[Change User](#)

System
Video
Audio
Network
Serial
Event
Preset
User

System

General

System Mode

System ID

Language

Firmware

Version

Board ID

Time

Start Time

Current Time

Time Zone

Automatically synchronize with NTP server

NTP Server Name

Reboot

Factory Reset

- **System Mode**
System mode: Select Encoder, Decoder.

- **System ID**
System ID: Alphanumeric System ID to be transferred to remote software

- **Language**
Language to be used for web-based configuration

- Firmware version
Current firmware version

- Board ID
Network board ID recognized by system

- Start Time
Latest system boot date and time

- Current Time
Current date & time: Enter a new date and time and press **Set Current Time** button to update date & time.

- Time Zone
Time zone: Select time zone of where the system is installed. Depending on the time zone, Daylight Saving Time will work automatically..

- Automatically synchronize with NTP server
Synchronize system time with an NTP server using NTP (network time protocol).
Name of the NTP server should be registered on NTP server Name.

- Reboot Server
Pressing **Reboot Server** button will cause the system to reboot. Do not press the Reboot button unless the server needs a reboot.

- Factory Reset
Set all settings to the factory default values. System log and user registrations are also cleared. Passwords will NOT be reset though! (take Care to note passwords)

8.5.2.2. Video Configuration

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Video Apply

Encode

Input Format Composite NTSC

Resolution 720x480

Framerate 25

Preference Bitrate

Quality Economy

Bitrate 1024 kbps (32 ~ 8000)

I-Frame Interval 100

Dual Encode

Use Dual Encode Off On

Dual Encode Algorithm H.264 MJPEG

Preference Bitrate

Resolution 720x480

Framerate 25


Quality Economy

Bitrate 1024 kbps (32 ~ 1024)

I-Frame Interval 100

Motion Detection

Use Motion Detection Off On



Edit Enable Disable Apply Edited Area

Mode Set Erase

Sensitivity(0 for most sensitive) 5

Information Display

SystemID Off On

Time Off On

Position Bottom Top

BurnIn OSD

SystemID Off On

Time Off On

Position Bottom Top

– **ENCODE**

■ **Input Format**

Select input format ; Composite NTSC or PAL

■ **Resolution**

Selectable video compression resolutions as below:

NTSC : 720 x 480, 720x 240, 352 x 480, 352 x 240

PAL : 720 x 576, 720 x 288, 352 x 576, 352 x 288

■ **Frame Rate**

Select video frame rate (the maximum number of frames of video images to compress.)

The frame rate actually transmitted can be affected by the network bandwidth limitations.

■ **Preference**

Preference in video compression and transmission: With 'Bitrate' selected, the video compression will be effected by the 'Bitrate' value entered. With 'Quality' selected, the video compression will be effected by the quality of image selected. Therefore, 'Bitrate' and 'Quality' corresponds to CBR (Constant Bitrate) and VBR (Variable Bitrate) respectively.

■ **Quality**

VBR (Variable Bit Rate) adjusts the bit rate according to the image complexity, using up bandwidth for increased activity in the image and less for lower activity in the monitored area. Quality is maintained at the expense of bandwidth

■ **Bitrate**

CBR (Constant Bit Rate) allows you to set a fixed target average bit rate that consumes a predictable amount of bandwidth. As the bit rate would usually need to be increased for increased image activity, but in this case it is constrained, the frame rate and image quality are affected negatively. Average bit rate is maintained at the expense of quality

■ **I-Frame Interval**

Setting numbers of P frames to each I frame between 0 and 255.

There will be no P-frame if 0 is set.

– DUAL ENCODE

■ Use Dual Encode

Select On to use dual encode

■ Dual Encode Algorithm

H.264 and MJPEG can be selected for secondary streaming. Maximum resolution is 720 x 480 and there are 8 steps of resolution. If MJPEG is selected, Preference supports only Quality mode. Bitrate can be set from 32~1024kbps for Dual Encode.

– MOTION DETECTION



■ Use Motion Detection

Select Motion Detection function

■ Motion Detection Area Editing

Configure regions for motion detection. Regions of arbitrary shape can be configured by the following steps.

- ① Enable **Edit** item.
- ② Select editing Mode. **Set** is for including cells to motion detection region and **Erase** is for excluding.
- ③ Select cells using the left button of the mouse. Multiple cells can be selected conveniently by click and dragging.
- ④ Press **Apply Edited Area** button to save the editing.

■ Sensitivity

A condition to trigger an event of motion detection. The value determines the sensitivity of the motion detection within a block: the smaller, the more sensitive. It is selectable from 0 to 10.


■ Information Display

System ID and/or server time can be displayed in the video window in Web View. Each item can be turned on or off and position can be configured as well. This information is displayed after the video is decompressed.

■ Burn-in OSD

Insert system ID and date/time in the compressed video. System ID and time respectively can be turned on or off in the video. And position and Font size can be selectable.

8.5.2.3. Audio Configuration

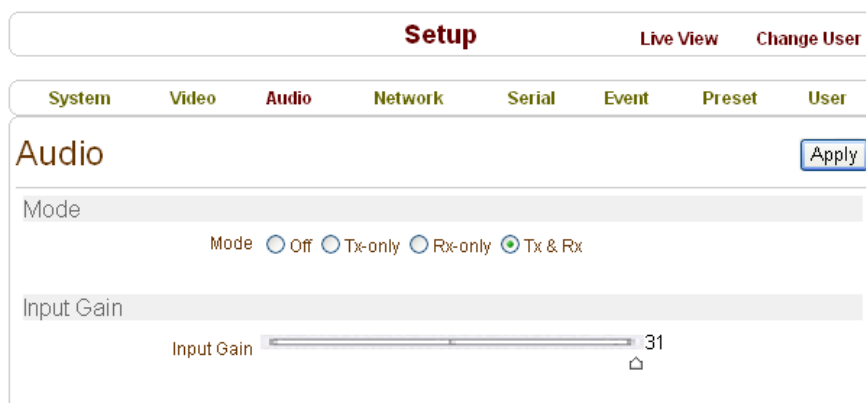

■ Mode

Select audio operation mode.

Mode	Status
Off	No operation
TX-Only	Transmit only
RX-Only	Receive only
TX & RX	Transmit and Receive

■ Input Gain

Set audio input gain.

8.5.2.4. Network Configuration

Setup
[Live View](#)
[Change User](#)

System
Video
Audio
Network
Serial
Event
Preset
User

Network

Apply

Local

IP Mode Fixed IP

Local IP 192.168.10.241

Local Gateway 192.168.10.1

Local Subnet 255.255.255.0

DNS

Obtain DNS server address automatically

Use the following DNS server addresses

Primary DNS Server 0.0.0.0

Secondary DNS Server 0.0.0.0

Port

Base Port 2222

HTTP Port 80

RTSP Port 554

RTSP Authentication

RTSP Authentication Off On

SNMP

SNMP Listen port 0

SNMP Trap Destination IP 0.0.0.0

SNMP Trap Destination Port 0

DDNS

DDNS Server None TrueDNS DynDNS

ID

Password

Domain Name

Address Information

Current IP 192.168.10.241

Current Domain Not RegisteredB

MAC Address 00:1C:63:A7:00:4A

■ IP Mode

Two IP modes are supported. Depending on the selected mode, further configuration items come as follows.

IP Mode	Selection	Description
Fixed IP	Local IP	Fixed IP address
	Local Gateway	Gateway IP address
	Local Subnet	Subnet mask
DHCP IP	N/A	

 Please, get IP address information from your ISP provider or network manager.

■ DNS

Set DNS server IP address.

■ Base Port

Network base port is used for communication between systems. In order for the encoder/decoder and remote systems to be connected together, each port number must be identically set.

■ HTTP Port

HTTP port used for web-based connection

■ RTSP Port

RTSP port used for RTSP-based connection

■ SNMP

The encoder/decoder can be used as an SNMP agent. It is compatible to both SNMPv1 and SNMPv2c. Vendor specific MIBs for IP camera/server are defined. SNMP listen port can be set and disabled when it is 0. SNMP trap is also supported. Destination IP and port can be set. If one of these values is 0, SNMP trap will be disabled.

■ Multicast IP

The multicast IP address selection range is between 224.0.1.0 and 238.255.255.255. The selection can be used only when media protocol is set to Multicast. The multicast address must be the same for the system to be connected using multicast protocol.

■ DDNS

Select the DDNS(Dynamic DNS) server to use. One of the two servers can be selected.

- True DNS : use True DNS service. Systems can be registered on the website for TrueDNS service: <http://ns1.truecam.net>. System will get a domain name of **xxx.truecam.net** style. Refer to the user guide document for True DNS service.
- DynDNS : use DynDNS service. Refer www.dyndns.org for details.

■ Address Information

Tree addresses are checked in 3 ways below. (Read-only).

IP Address

The servers own IP address. This information is useful when the server's IP mode is set to DHCP.

Domain Name

In case the server is registered with DDNS server, the registered domain name is displayed.

MAC Address

Display the MAC address of the server. In case the server is registered with DDNS server, the MAC address is used in DDNS registration.

8.5.2.5. Serial Port Configuration

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Serial Apply

COM1 (RS-232 Port)

Protocol RS-232

Bitrate 115200bps

Data Bit 8Bits

Parity None

Stop Bit 1Bits

COM2 (RS-422/485 Port)

Protocol RS-485

Bitrate 9600bps

Data Bit 8Bits

Parity None

Stop Bit 1Bits

PTZ

PTZ Type None

PTZ ID 1

PTZ Port COM2

Sensor Type

Sensor 1 Off N/O N/C

Sensor 2 Off N/O N/C

Sensor Schedule

Select Sensor Off Sensor On

Sensor 1

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
MON	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
TUE	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
WED	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
THU	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
FRI	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
SAT	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

Sensor 2

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
MON	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
TUE	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
WED	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
THU	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
FRI	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
SAT	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

■ Serial Port Configuration

There are two serial ports, (COM1 and COM2) on the encoder/decoder boards. While COM1 port is fixed to RS-232C, COM2 port can be set to RS-422 or RS-485 protocol.

The serial ports can be configured as follows.

Mode	Selection
Bitrate	2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Data Bits	5, 6, 7, 8 bits
Parity	NONE, EVEN, ODD bit
Stop Bit	1, 2 bit

Each of the serial ports configurations must be same as connecting device.

■ PTZ Configuration

PTZ Type

Select the type of PTZ camera or receiver.

PTZ ID

Since it is possible to control multiple PTZ cameras or receivers over single control line, each camera or receiver will be assigned with a unique ID. Enter PTZ ID of a camera or receiver for control. The ID value range can be between 0 and 255.

PTZ Port

Select the serial port used for PTZ camera control.

■ Sensor Type

There are two sensor input ports on the encoder/decoder board. Each of the sensor ports can be configured to the following.

Function	Operation
OFF	Not used
NO (Normally Open)	The port is normally open and activated when closed.
NC (Normally Closed)	The port is normally closed and activated when opened.

The function of the sensor port is set based on the type of the sensor connected.

■ Sensor Schedule

Each sensor port can be enabled or disabled in day (of a week) and hour unit. Sensor is disabled for grey-coloured duration.

8.5.2.6. Event Configuration

Setup

[Live View](#) [Change User](#)

System
Video
Audio
Network
Serial
Event
Preset
User

Event Apply

Local

Sensor1	<input type="checkbox"/> Beep	<input checked="" type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
Sensor2	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input checked="" type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
On Video Loss	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
On Motion	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset

Remote

Sensor1	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
Sensor2	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
Sensor3	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
Sensor4	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
On Video Loss	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
On Motion	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset

On Disconnect

On Disconnect	<input type="checkbox"/> Beep	<input type="checkbox"/> Alarm1	<input type="checkbox"/> Alarm2	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	No Preset
---------------	-------------------------------	---------------------------------	---------------------------------	---------------------------------	------------------------------	-----------

Duration

Beep	<input type="text" value="synchronous"/>
Alarm1	<input type="text" value="synchronous"/>
Alarm2	<input type="text" value="synchronous"/>

E-mail Notification

Server Address	<input type="text"/>
Port	<input type="text" value="25"/>
Sender Address	<input type="text"/>
Authentication on SMTP server	<input checked="" type="radio"/> Off <input type="radio"/> On
ID	<input type="text"/>
Password	<input type="text"/>
Destination Address	<input type="text"/>
Video Clip Attaching	<input checked="" type="radio"/> Off <input type="radio"/> Primary Video <input type="radio"/> Secondary Video (H.264 only) <input type="radio"/> JPEG Capture
<input type="button" value="E-mail Test"/>	
Before testing e-mail, please apply your configuration first.	

FTP Upload

Server Address	<input type="text"/>
Port	<input type="text" value="21"/>
ID	<input type="text"/>
Password	<input type="text"/>
Upload Video	<input checked="" type="radio"/> Primary Video <input type="radio"/> Secondary Video (H.264 only) <input type="radio"/> JPEG Capture
Continuous Upload	<input checked="" type="radio"/> Off <input type="radio"/> On
Upload Duration	<input type="text" value="10"/> sec (Max 300)
Upload Interval	<input type="text" value="300"/> sec (Max 3600)

Event Record

Pre-event Time	<input type="text" value="None"/>
Post-event Time	<input type="text" value="None"/>

The event configuration configures the actions for each event type. **Local** section configures the actions for events from local (self) system and configuration activates local devices and **Remote** section configures the actions for events from remote (peer) systems.

The following table lists the possible actions for events.

Action	Description
Beep	Outputs beep sound using the buzzer in the system
Alarm1/Alarm2	Triggers alarm (relay) port.
E-mail	Sends E-mail to the specified address. AVI file can be attached
FTP	Upload AVI file to a specified FTP server
Preset	Moves the PTZ to associated preset position

■ **Sensor1 / Sensor2**

Configure the actions when the sensor 1 or 2 is activated. Multiple actions can be set for a single event.

■ **On Video Loss**

Configure the actions when video input signal is lost. Multiple actions can be set for a single event.

■ **On Motion**

Configure the actions when motion is detected. Multiple actions can be set for a single event.

■ **On Disconnect**

Configure the actions when the link (connection) with peer system is disconnected. Multiple actions can be set for a single event.

■ **Alarm and Beep activation duration**

Set the duration of alarm or beep activation in case of an event. If it is set to continuous, it will be in an active state until an operator resets it manually.

■ E-mail Notification

Specify the information to send an E-mail as the action of an event. The address of mail (SMTP) server needs to be specified on **Server Address** field, and **Port** specifies the port for SMTP operation (Port 25 is the default port in SMTP operation. If a different port is configured in the SMTP server, this port needs to be changed accordingly). When the server requires authentication, ID and password of an E-mail account need to be entered. Destination address needs to be entered in the **Destination Address** field. More than one address can be entered by delimiting comma (,) or semi-colon (;). Destination addresses can take up to 63 characters. Video clip in an AVI file format at the moment of the event can be attached by setting **Video Clip Attaching**.

■ FTP Upload

Specify the information for uploading video file as the action of an event. The address of an FTP server to receive video files is specified on **Server Address** field, and **Port** specifies the port for FTP operation (Port 21 is the default port in FTP operation. If different port is configured in the FTP server, this port needs to be changed accordingly.). ID and password for accessing the FTP server also need to be specified. Video clip of AVI file format or JPEG file at the moment of the event can be attached by setting **Video Clip Attaching**.


By setting **Continuous Upload** to On, it is possible to upload video clips periodically regardless of events. **Upload Duration** specifies the duration of one upload file, and **Upload Interval** specifies how often it should happen. Upload Interval doesn't include the duration. If Upload Interval is 60 and Upload Duration is 20, it uploads a file for 20 seconds duration every 80 seconds.

■ Event Recording

Specify how a video clip is to be generated for E-mail sending or FTP uploading.

Pre-event Time specifies the duration of recording before an event happens. **Post-event Time** specifies the duration after the event is cleared.

8.5.2.7. Preset Configuration

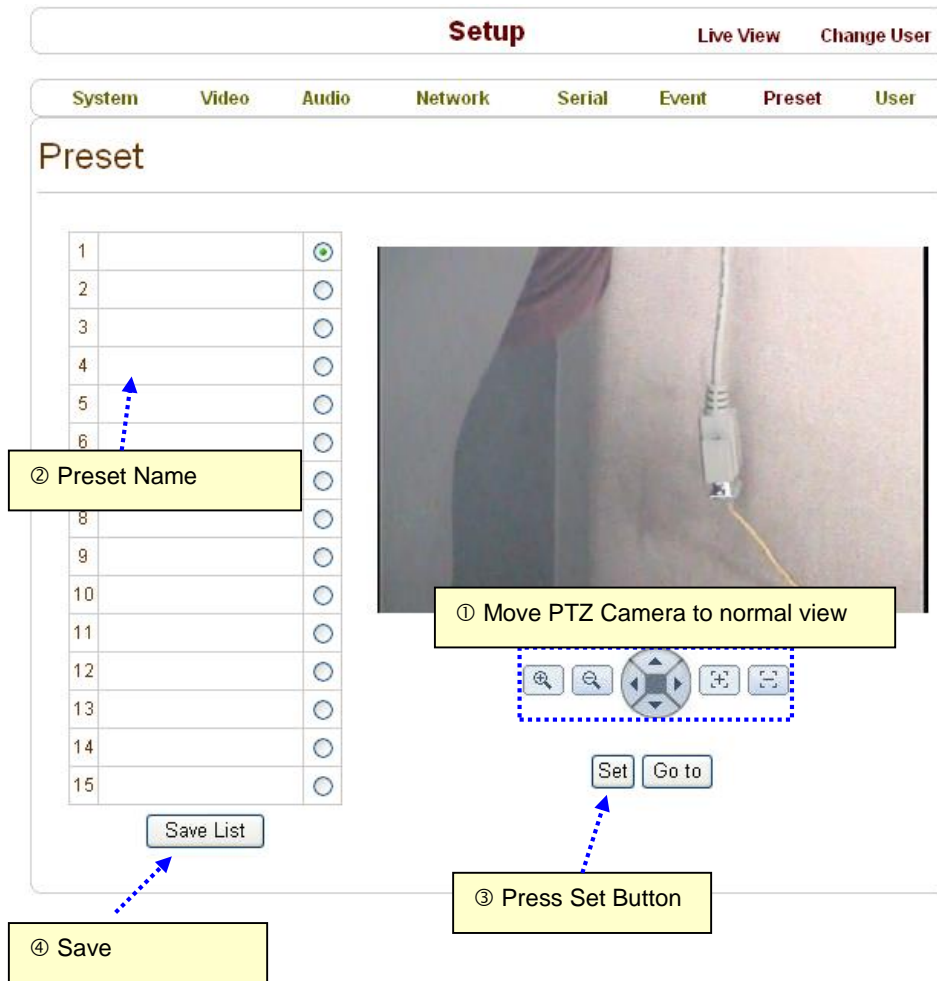

Configure up to 15 preset positions. Preset function is not available on some PTZ receivers. Make sure to check if a PTZ receiver supports preset.

■ Preset Configuration

Set the PTZ Presets by following the next steps.

- ① Move cameras to desired view using PTZ control buttons.
- ② Enter Preset name.
- ③ Press **Set** button.
- ④ Once all the presets are set, press **Save List** button.

■ Move to Preset Position

Select a preset from the Preset and press **Go To** button, then, the camera will move to the selected preset position.

8.5.2.8. User Configuration

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

User

User List

ID	Privilege Level	
admin	Admin	⊕

Add
Delete
Modify Password
Modify Privilege

Login Policy

Skip Login Disable Enable

Privilege Level After Login Skipped Admin


Apply

User can be registered and privilege levels of a user can be specified. User configuration is allowed only to admin user. Max 16 users can be registered and each user can have one off our privilege.

Privilege	Allowed Operations	Remarks
Admin	All operations	User id = admin
Manager	All operations except for user configuration	
User	Live viewing and PTZ control	
Guest	Live viewing only	

■ Add User

Page for adding a user appears after pressing **Add** button.

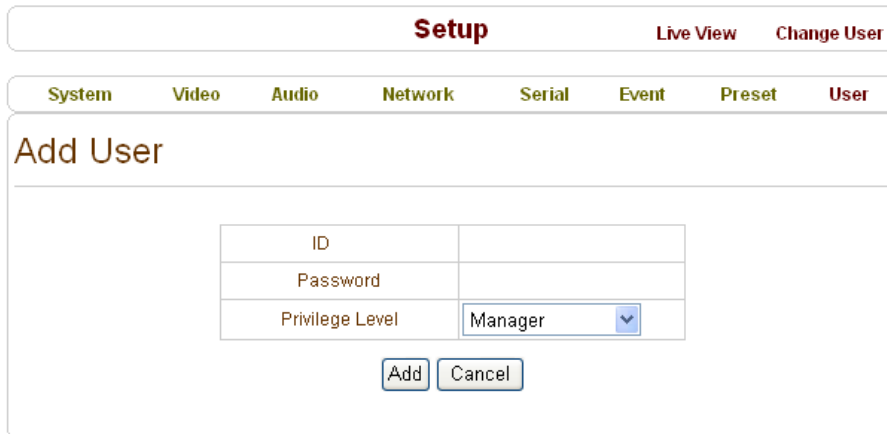

ID	
Password	
Privilege Level	Manager

Add Cancel


User ID and password need to be entered and privilege level needs to be selected. User ID and password consist of alphanumeric strings of max 15 characters.

■ Delete User

A user is deleted by pressing **Delete** button.

■ Change Password

Pressing **Modify Password** button after selecting a user shows a page for changing password.

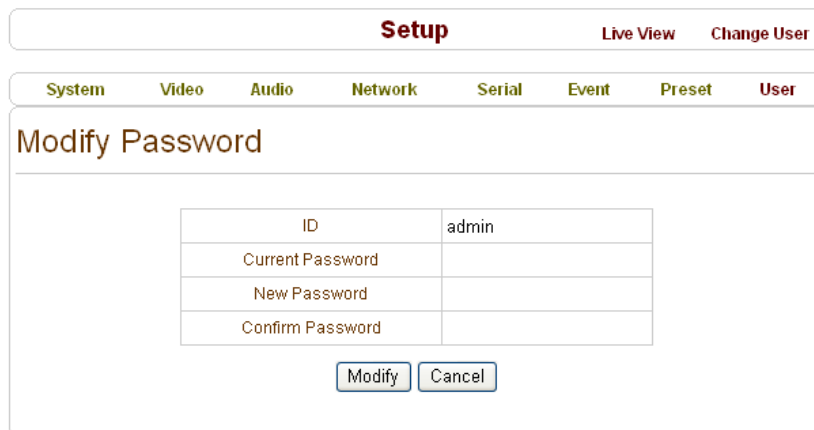


ID	admin
Current Password	
New Password	
Confirm Password	

Modify Cancel

In case changing admin password, old password is checked.

■ **Modify Privilege Level**

Pressing **Modify Privilege** button after selecting a user shows a page for changing the privilege. It is not allowed to change the privilege level of admin user.

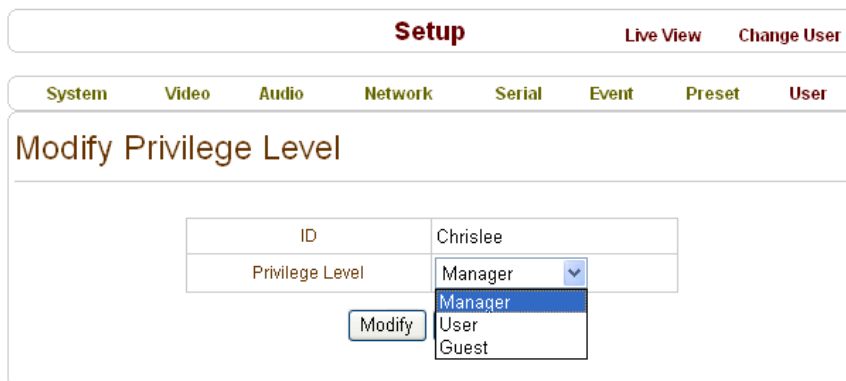

ID	Chrislee
Privilege Level	<div style="border: 1px solid black; padding: 2px;"> Manager <ul style="list-style-type: none"> <li style="background-color: #e0e0e0; padding: 2px;">Manager <li style="padding: 2px;">User <li style="padding: 2px;">Guest </div>

■ **Login Policy**

Skip Login is provided for convenient access to the server when authentication is not required. When **Skip Login** is set to Enable, login step is skipped. The privilege level after login in this way is determined by the setting of **Privilege Level After Login Skipped**.

8.5.3. Decoder System

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

System

General

System Mode Decoder

System ID Video Server

Language English

Firmware

Version Dec:V1.102A-012

Board ID 47

Time

Start Time 2000/01/01 12:14:11

Current Time 2000/01/01 12:23:36

Time Zone (GMT+09:00) Seoul

Automatically synchronize with NTP server


NTP Server Name 0.pool.ntp.org

Reboot

Factory Reset

Once system mode is changed to decoder, Firmware version shows Dec xxxxxx which means decoder mode.

8.5.3.1. Video Configuration

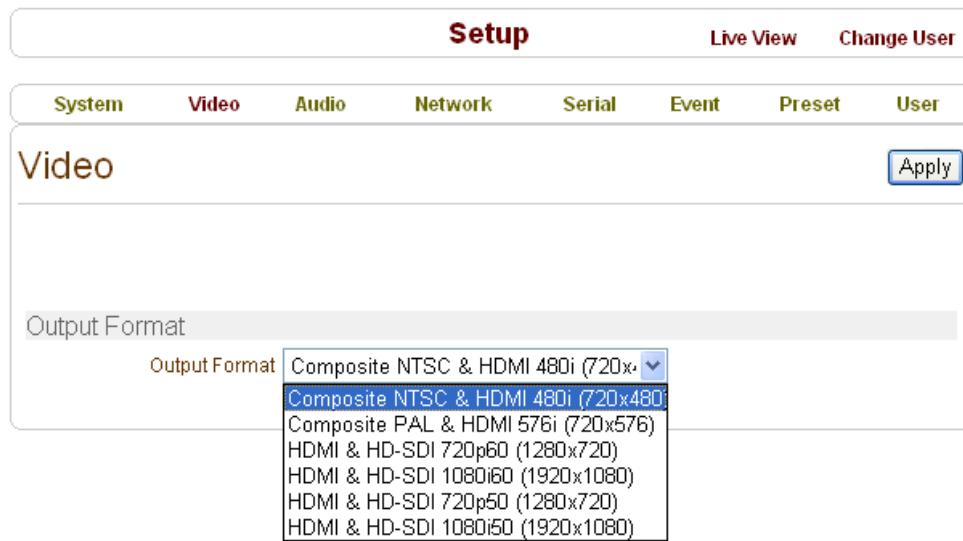

Setup [Live View](#) [Change User](#)

[System](#) **Video** [Audio](#) [Network](#) [Serial](#) [Event](#) [Preset](#) [User](#)

Video [Apply](#)

Output Format

Output Format Composite NTSC & HDMI 480i (720x480)
Composite NTSC & HDMI 480i (720x480)
Composite PAL & HDMI 576i (720x576)
HDMI & HD-SDI 720p60 (1280x720)
HDMI & HD-SDI 1080i60 (1920x1080)
HDMI & HD-SDI 720p50 (1280x720)
HDMI & HD-SDI 1080i50 (1920x1080)

Regardless of input resolution of Encoder or IP camera, the Decoder system of ANT-3300 can display video format as follows;

- Composite NTSC & HDMI 480i (720 x 480)
- Composite PAL & HDMI 576i (720 x 576)
- HDMI & HD-SDI 720p60 (1280x720)
- HDMI & HD-SDI 1080p60 (1920 x 1080)
- HDMI & HD-SDI 720p50 (1280 x 720)
- HDMI & HD-SDI 1080i50 (1920 x 1080)

Resolutions higher than the decoders maximum decode resolution capability are upscaled if the display resolution is higher.

8.5.3.2. Network Configuration

Network page of Decoder has a section for specifying the remote system to connect.

Setup Live View Change User

System **Video** **Audio** **Network** **Serial** **Event** **Preset** **User**

Network Apply

Local
IP Mode: Fixed IP
Local IP: 192.168.10.241
Local Gateway: 192.168.10.1
Local Subnet: 255.255.255.0

DNS
 Obtain DNS server address automatically
 Use the following DNS server addresses
Primary DNS Server: 0.0.0.0
Secondary DNS Server: 0.0.0.0

Port
Base Port: 2222
HTTP Port: 80
RTSP Port: 554

RTSP Authentication
RTSP Authentication: Off On

SNMP
SNMP Listen port: 0
SNMP Trap Destination IP: 0.0.0.0
SNMP Trap Destination Port: 0


Remote
Remote Address: 192.168.10.121
Remote Port: 0
Remote Channel: Channel 2
Media Protocol: TCP
Use Streaming Server: Off On
SS IP Address: 0.0.0.0
SS Port: 0
SS ID:
SS Password:

Multicast
Multicast IP: 224.10.0.0

DDNS
DDNS Server: None TrueDNS DynDNS
ID:
Password:
Domain Name:

Address Information
Current IP: 192.168.10.241
Current Domain: Not RegisteredB
MAC Address: 00:1C:63:A7:00:4A

- Remote Address
Address of the remote system to connect.
- Remote Channel
The channel can be selectable when the remote system has multiple video channels.
- Media Protocol
Protocol used for delivery of audio and video data between remote system and Decoder.
- Use Streaming Server
Decoder system has settings to connect to Encoder or IP Camera via the Streaming Server. To connect to Encoder or IP Camera via Streaming Server, **Use Streaming Server** of **Remote** group in **Network** page should be set to **On** and information of the **Streaming Server (SS)** needs to be configured appropriately.

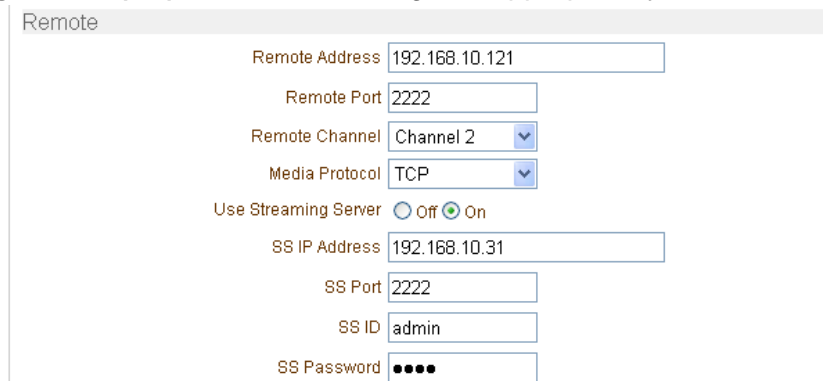

Remote

Remote Address	192.168.10.121
Remote Port	2222
Remote Channel	Channel 2
Media Protocol	TCP
Use Streaming Server	<input type="radio"/> Off <input checked="" type="radio"/> On
SS IP Address	192.168.10.31
SS Port	2222
SS ID	admin
SS Password	••••

8.5.3.3. Event Configuration

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Event Apply

Local

Sensor1	<input type="checkbox"/>	Beep	<input checked="" type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
Sensor2	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input checked="" type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
On Video Loss	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
On Motion	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>

Remote

Sensor1	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
Sensor2	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
Sensor3	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
Sensor4	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
On Video Loss	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
On Motion	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>

On Disconnect

On Disconnect	<input type="checkbox"/>	Beep	<input type="checkbox"/>	Alarm1	<input type="checkbox"/>	Alarm2	<input type="text" value="No Preset"/>
---------------	--------------------------	------	--------------------------	--------	--------------------------	--------	--

Duration

Beep	<input type="text" value="synchronous"/>
Alarm1	<input type="text" value="synchronous"/>
Alarm2	<input type="text" value="synchronous"/>

The event configuration configures the actions for each event type. **Local** section configures the actions for events from local (self=Decoder) system, and configuration activates local devices and **Remote** sections configures the actions for events from remote (Encoder or IP Camera) system.

The following table lists the possible actions for events.

Action	Description
Beep	Outputs beep sound using the buzzer in the system
Alarm1/Alarm2	Triggers alarm (relay) port.
E-mail	Sends E-mail to the specified address. AVI file can be attached
FTP	Upload AVI file to a specified FTP server
Preset	Moves the PTZ to associated preset position

Page | 46 of 51

Doc. No. 26037-00

■ **Sensor1 / Sensor2**

Configure the actions when the sensor 1 or 2 is activated. Multiple actions can be set for a single event.

■ **On Video Loss**

Configure the actions when video input signal is lost. Multiple actions can be set for a single event.

■ **On Motion**

Configure the actions when motion is detected. Multiple actions can be set for a single event.

■ **On Disconnect**

Configure the actions when the link (connection) with peer system is disconnected. Multiple actions can be set for a single event.

■ **Alarm and Beep activation duration**

Set the duration of alarm or beep activation in case of an event. If it is set to continuous, it will be in active state until an operator reset it manually.

Appendix A: Sensor and Alarm Port

1. Sensor Port


■ Terminal Type

- * Voltage Rating: 150VAC
- * Current Rating: 2A
- * Colour: Red

■ Sensor Signal Input Type

- * NO Contact Signals

■ Connection to External Device

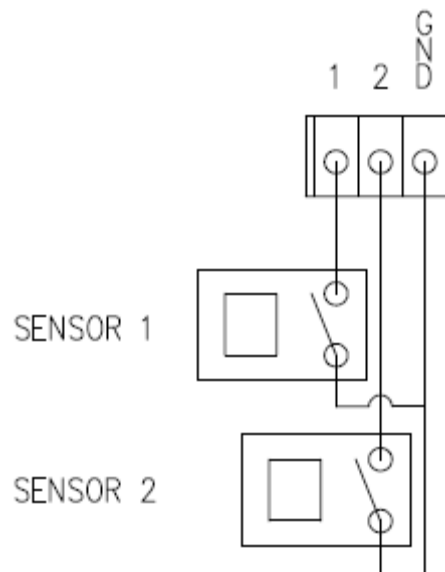

2. Alarm Port

■ Terminal Type

- * Voltage Rating: 150VAC
- * Current Rating: 2A

■ Relay Type


- * Contact Rating: 1A 30VDC
- * Switching Power: Max 30W 62.5VA
- * Switching Voltage: Max 60VDC

■ Alarm Signal Output Type

- * NO/NC Contact Signals

■ Connection to External Device

Appendix B: Serial Port

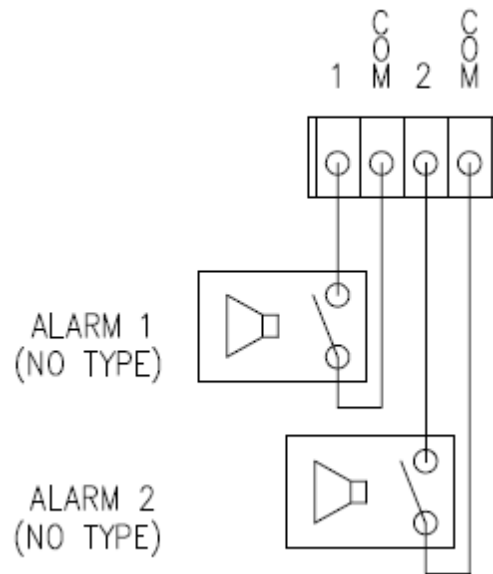


1. RS-232 Port

■ Port Type

* 3 PIN

* Pin Arrangement

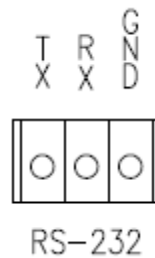

* Pin Description

Pin NO	Pin Name	Description
1	TX	RS232 TX(Transmit)
2	RX	RS232 RX(Receive)
3	GND	Ground

2. RS-422/485 Port

■ Port Type

- * 4 PIN
- * Pin Diagram

RS-422/485 TERMINALS



* Pin Description

Pin No.	Pin Name	Description
1	RX-	RS422 RX-
2	RX+	RS422 RX+
3	TX-	RS422 TX- or RS485 TRX- It is selectable by S/W Setup
4	TX+	RS422 TX+ or RS485 TRX+ It is selectable by S/W Setup

AMG

Advanced CCTV & Transmission Solutions



Contact Information

HEAD OFFICE

ADDRESS:

AMG SYSTEMS LTD.
3 THE OMEGA CENTRE
STRATTON BUSINESS PARK
BIGGLESWADE
BEDFORDSHIRE
SG18 8QB
UNITED KINGDOM

TEL:

+44 (0) 1767 600 777

FAX:

+44 (0) 1767 600 077

WEBSITE:

www.amgsystems.com

GENERAL ENQUIRIES:

sales@amgsystems.com